

Nano Roll

Installation Instructions




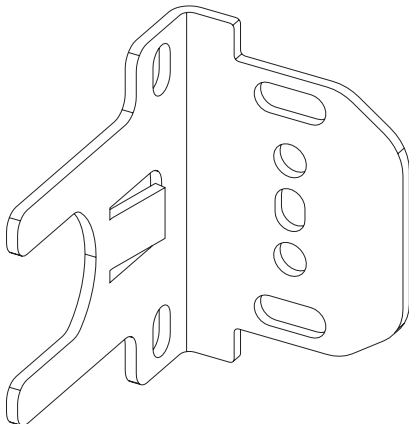
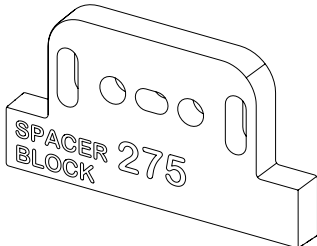
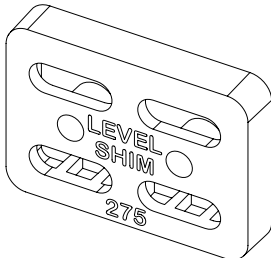
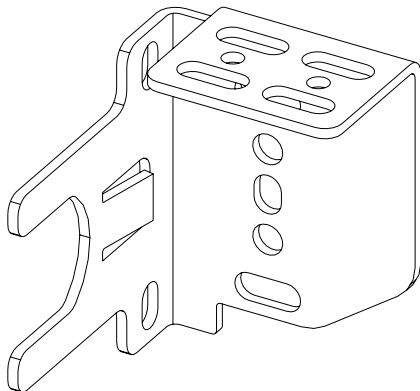
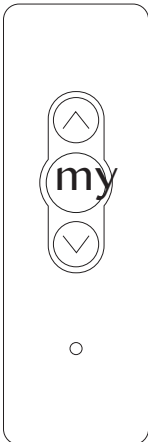
Narrow Wirefree - RTS



INSTALLERS: Please leave this manual with the owner.




PARTS LIST - NANO ROLL (NARROW) - WIREFREE
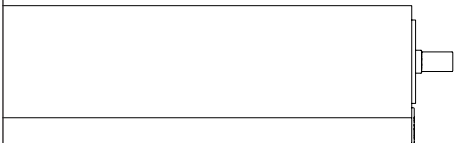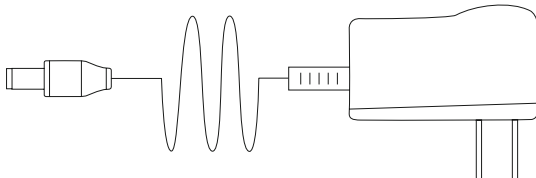
<div>Shades (275 Roll)</div> <div></div>		<div>Charger</div> <div></div>	
<div><div></div><div>Please note all the Serial No.s on your Shade motors. See the last page on these instructions.</div></div>			
<div>Wall Brackets</div> <div></div>		<div>Spacer Blocks (included)</div> <div></div>	<div>Leveling Shims (included)</div> <div></div>
<div>Ceiling Brackets</div> <div></div>		<div>Installation Remote (1 per shade)</div> <div></div>	
<div>Screws Included (3 per bracket)</div>			


NARROW SHADE - INITIAL CONSIDERATIONS

1a. Install 4 Spacer Blocks per bracket, to accommodate for external battery.

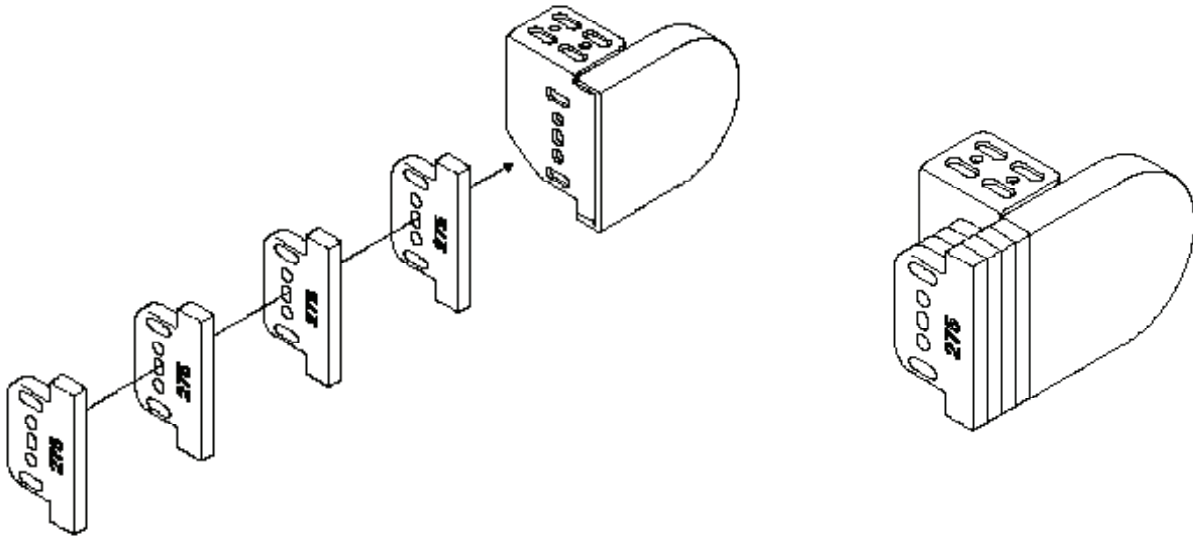

Wall Mount only

1b. Install shade brackets at least 1" from back plane (glass or wall) to accommodate for external battery.

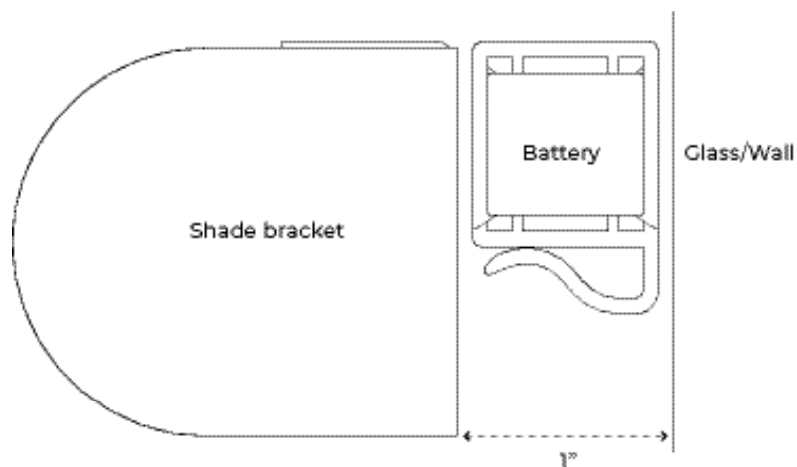


Ceiling Mount only

SPACER BLOCKS AND LEVELING SHIMS (OPTIONAL)


Spacer Blocks - used to clear an obstruction in the fabric path.
Connect spacer blocks to shade brackets before installation

NOTE: Do not use more than
4 Spacer blocks per bracket.

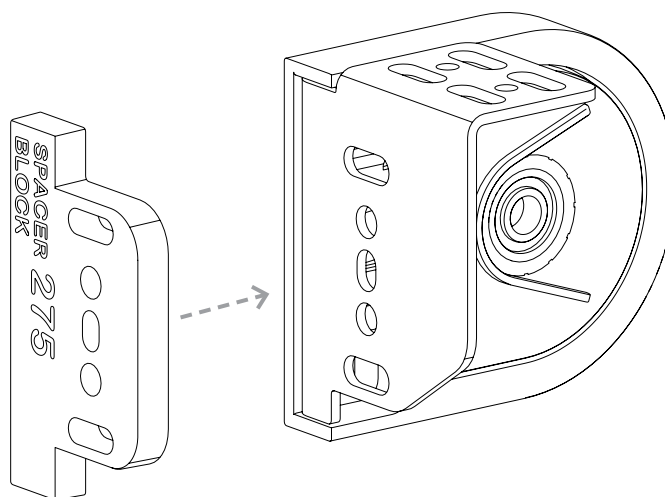


Leveling Shims - used if the window frame is out of level.
Connect to shade brackets before installation

NOTE: Do not use more than 2 leveling
shims per bracket.

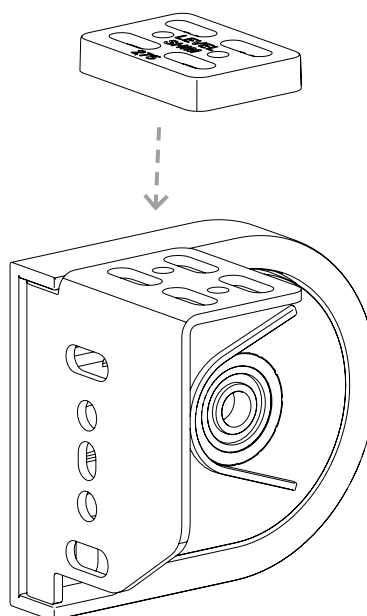


BRACKET INSTALLATION

1a. Install the wall bracket / end cap assemblies with the supplied screws

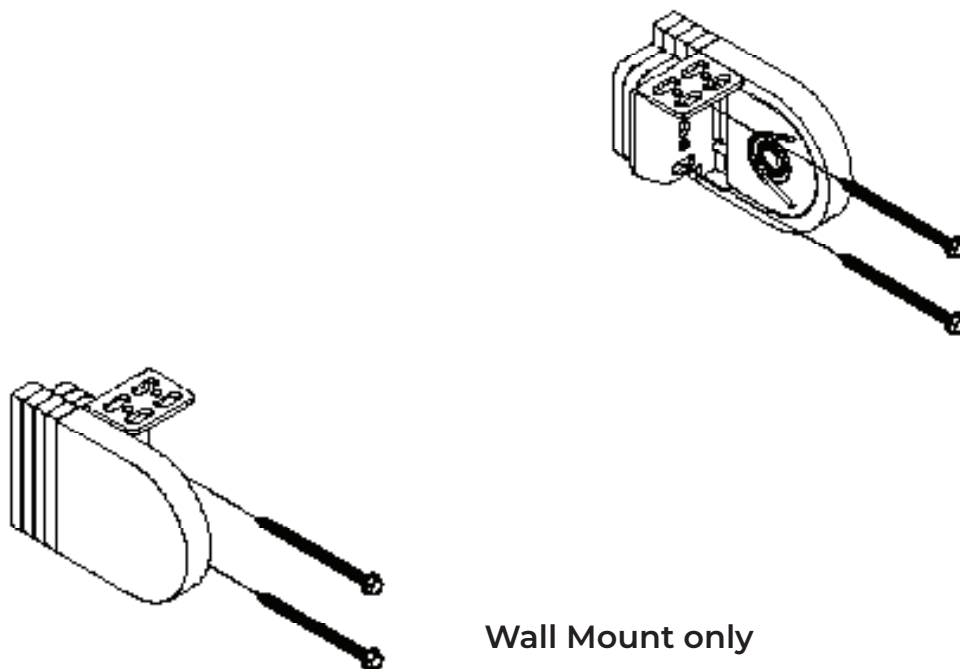


1b. Install the wall bracket / end cap assemblies with the supplied screws

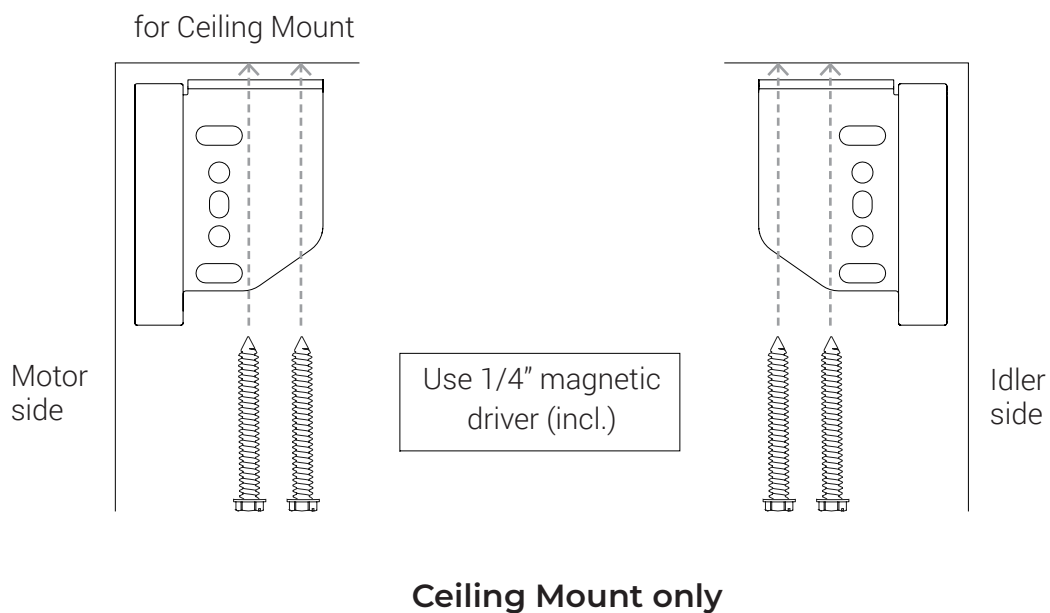


MEASURE - NANO ROLL

Measure the end cap to end cap width and verify it matches the ordered width. Adjust accordingly

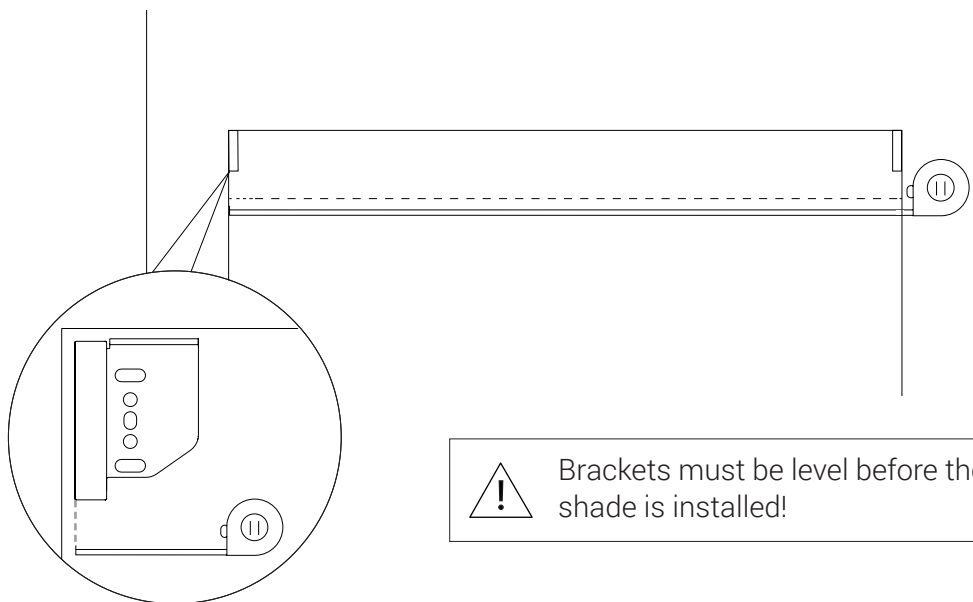


BATTERY INSTALLATION - WALL MOUNT


1. Install the external battery brackets to the dimensions listed below

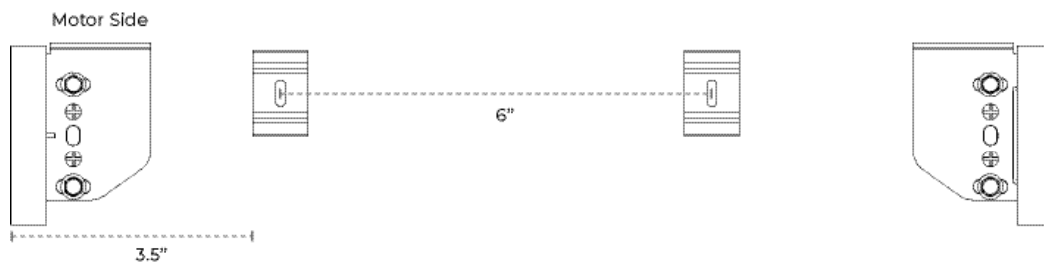

2. Fasten each bracket with the included hardware (use drywall anchors if necessary)

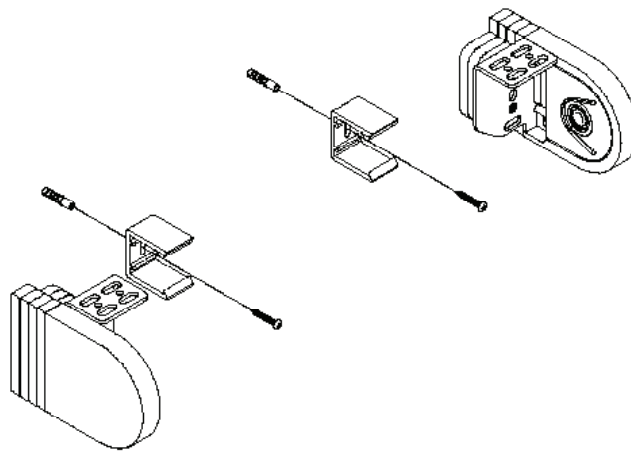


3. Connect the magnet wire to the external battery and install into the brackets as shown below.

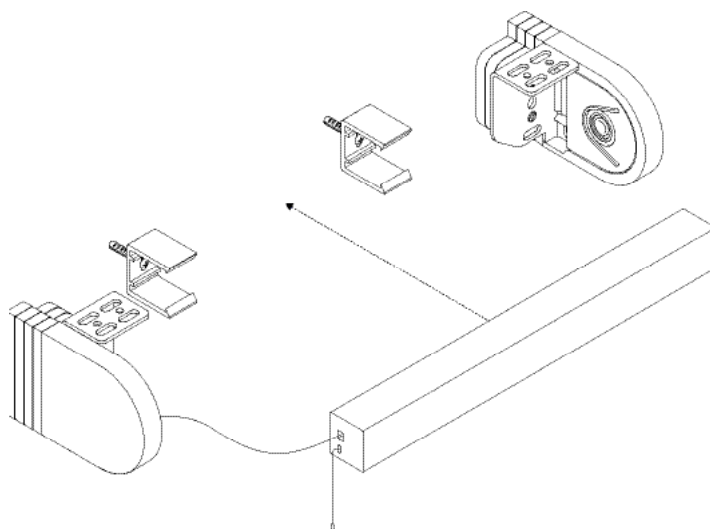


BATTERY INSTALLATION - CEILING MOUNT

1. Install the external battery brackets to the dimensions listed below

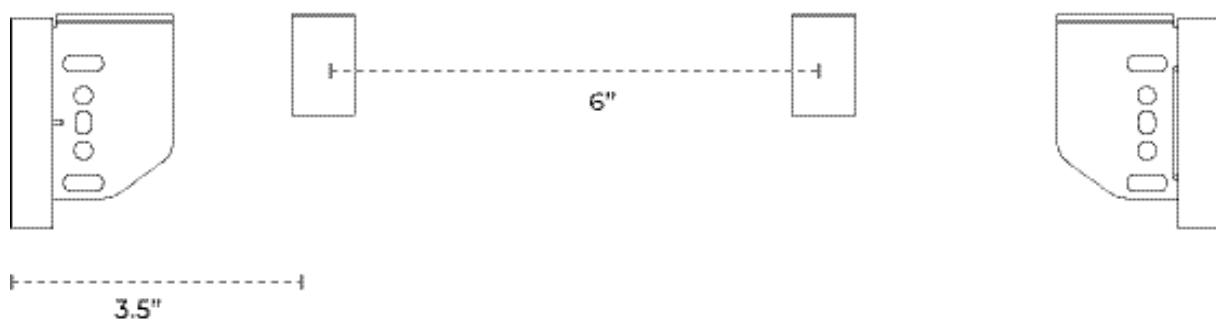


2. Fasten each bracket with the included hardware (use drywall anchors if necessary)

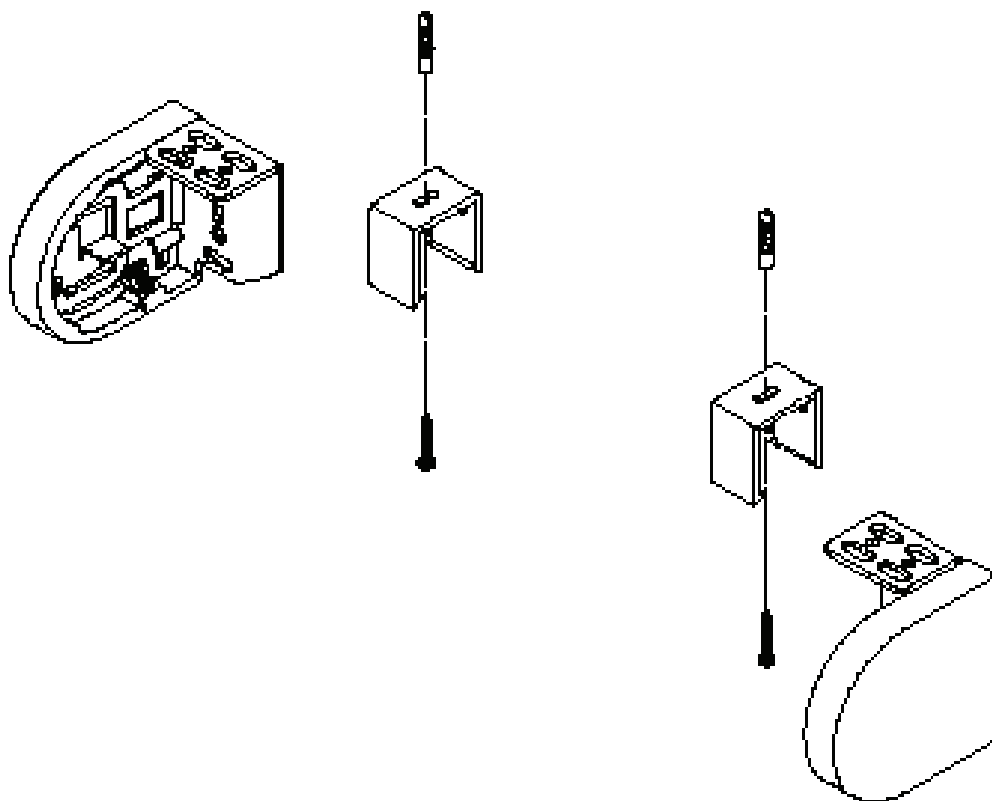


BATTERY INSTALLATION - CEILING MOUNT

3. Connect the magnet wire to the external battery and install into the brackets as shown below.


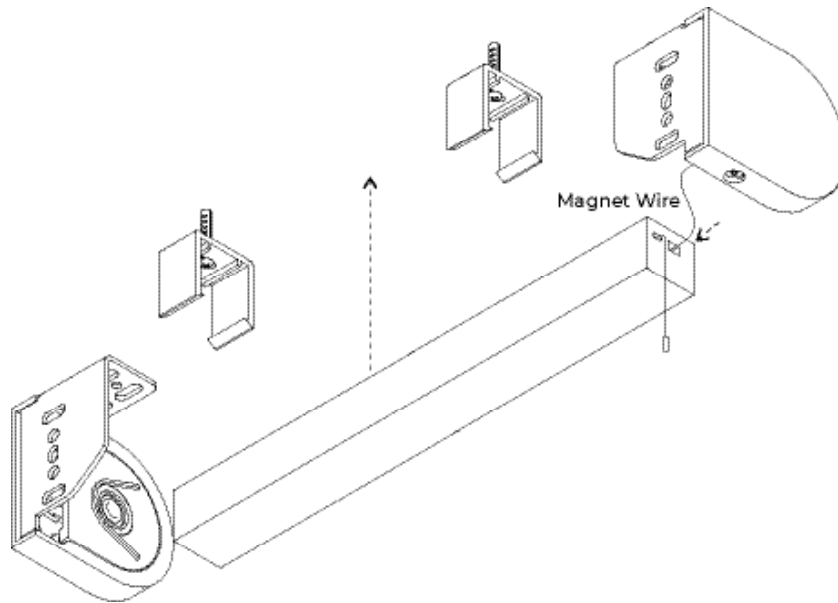


4. Install wire clips as shown (optional)

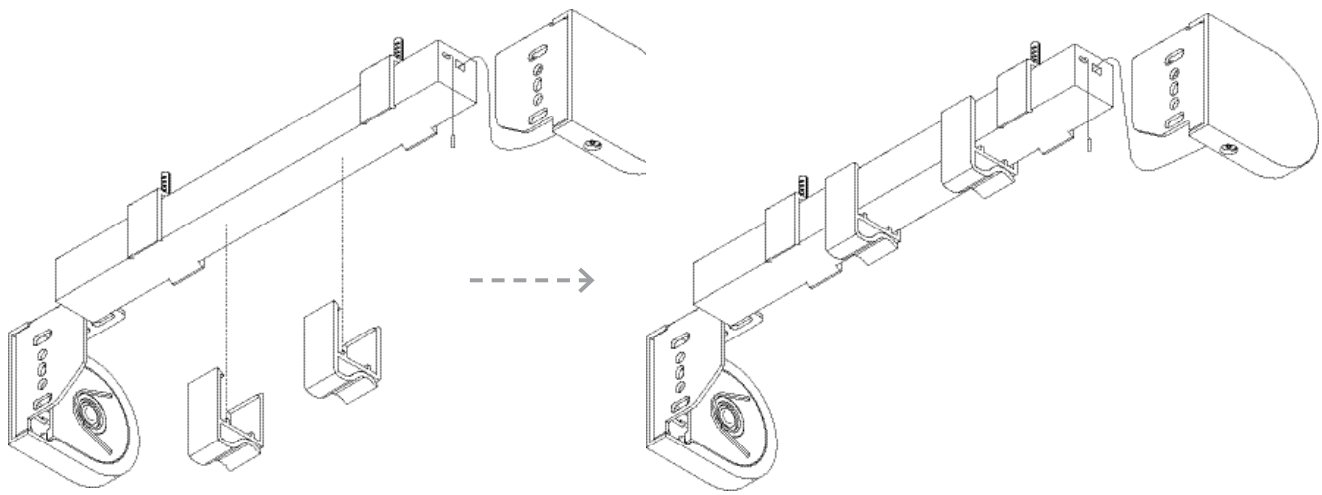



SHADE INSTALLATION - NANO ROLL

1. Remove the idler end cap with flat bladed screw driver

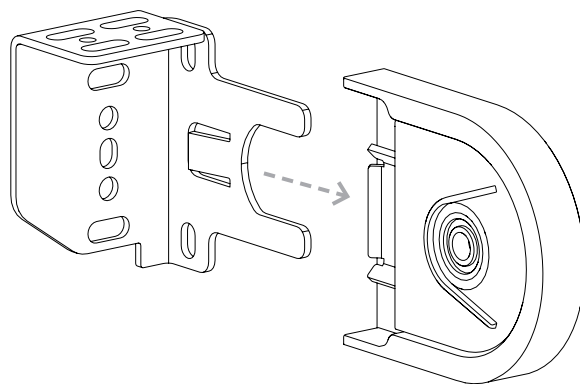
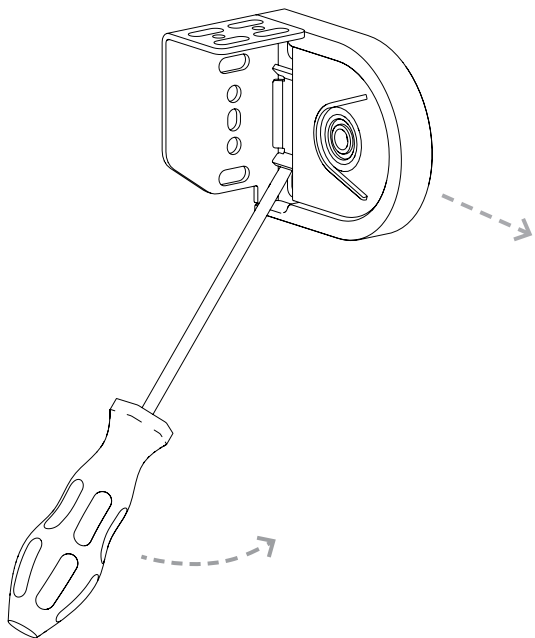


2. Insert motor side completely.


NOTE: When installing, the shade should be at the upper limit.

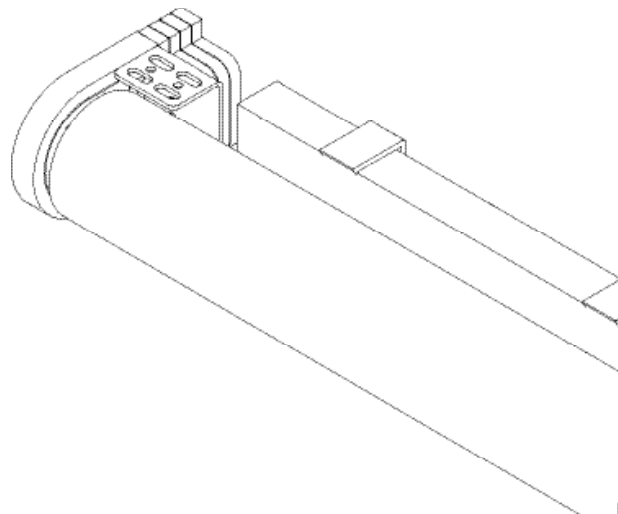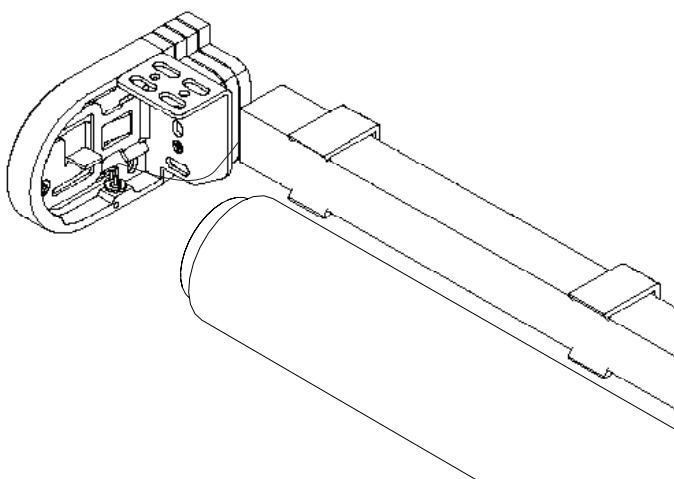

3. Then, while supporting motor side, put idler end cap over the idler and snap into place.

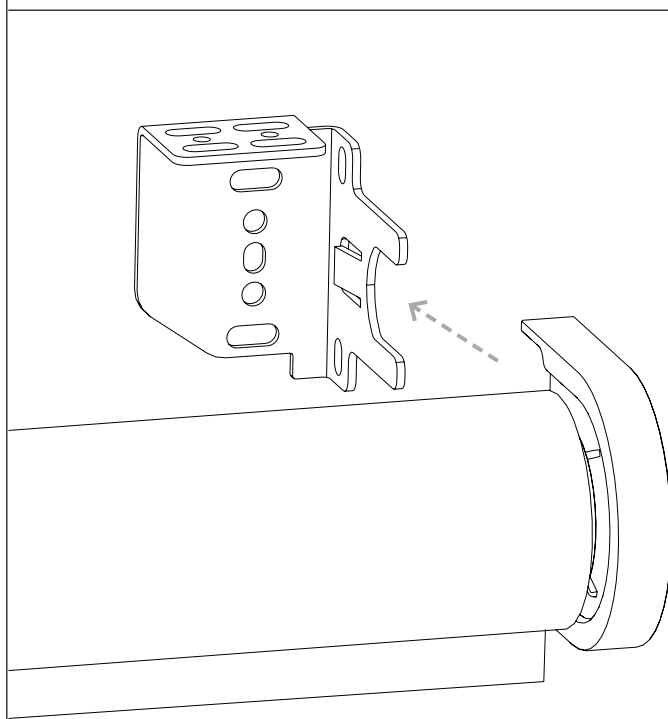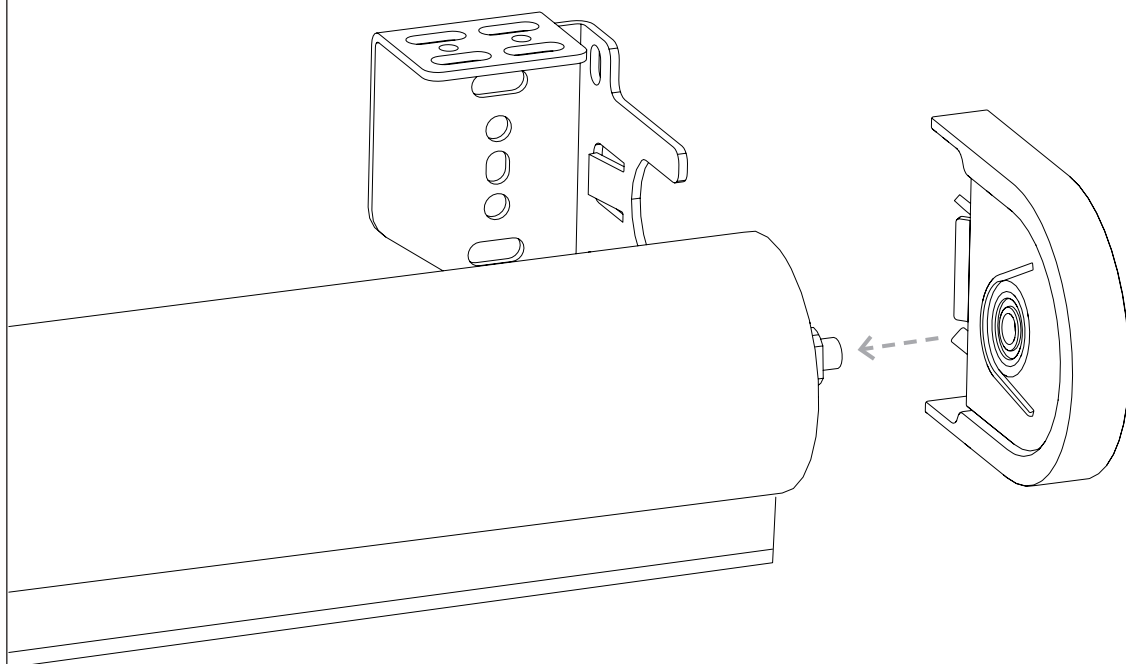


There will be an audible click.

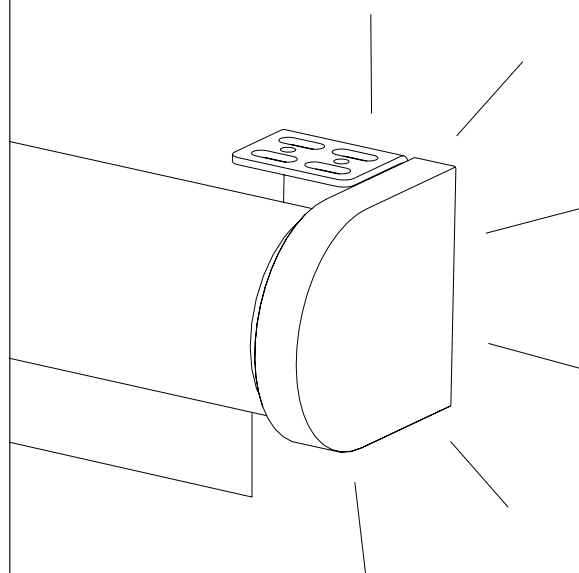

CONNECT BATTERY - WALL MOUNT


1. Connect Shade to External Battery as shown below.

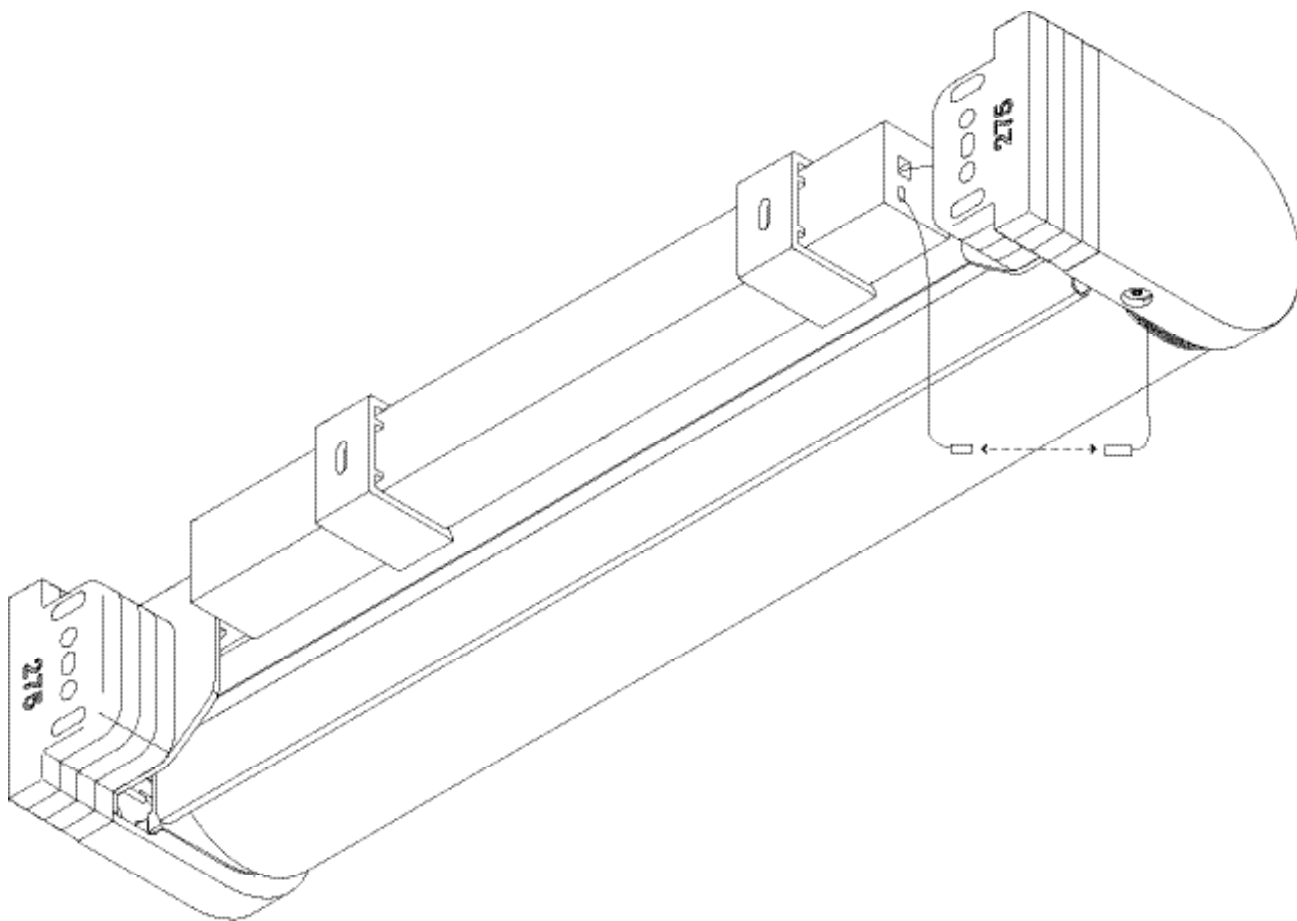

NOTE: After connecting shade to battery, tuck wires up and away from shade.

CONNECT BATTERY - CEILING MOUNT

1. Connect Shade to External Battery as shown below.

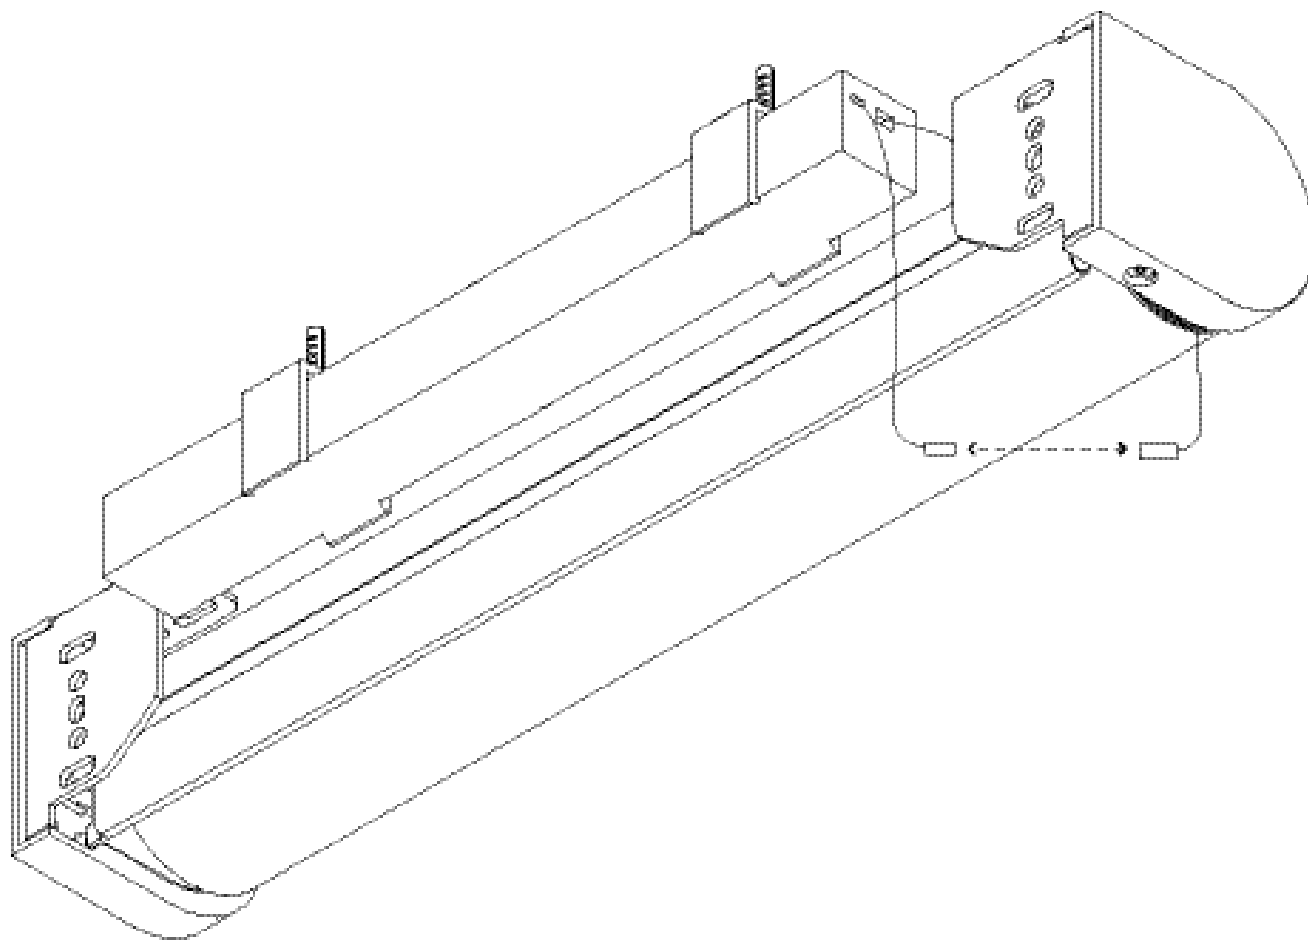

NOTE: After connecting shade to battery, tuck wires up and away from shade.

PROGRAMMING - RTS

PROGRAMMING STEPS (must follow in order)

Step 1: Fine tune lower limit

Step 2: Assign shades to groups

Step 3: Pair groups to control system (Mylink, LinkPro)

⚠ Warning: Do not attempt to use any installation remote until all the shades are installed.

Each RTS Nano shade includes an installation remote that is used to adjust limits and program group controls. These installation remotes are uniquely numbered to the shade they are paired with. The lower limit of every shade is preprogrammed to ½" from the bottom of the window. After installing each shade, follow these steps to adjust the lower limit:

STEP 1 - Fine tuning lower limit :


1. Beginning with the first shade, pull plastic tab from remote and press ▽ allowing shade to run to lower limit set at the factory.
2. When shade has stopped, adjust the lower limit by holding △ and ▽ simultaneously until the shade jogs.
3. Use △ or ▽ to move the shade to the desired lower limit.
4. Hold the "My" button until the shade jogs again.
5. Repeat this procedure at each window until all shades have lower limits set to desired positions.

STEP 2 - Assign shades to groups :

Next, program group controls. To pair with a permanent transmitter such as a multichannel Telis or DecoFlex, follow these steps.


1. Press and hold the program button on the back of the installation remote until the shade jogs.
2. Select the channel where you want to create a group, then bump (do not hold down) the program button on the back of the remote - the shade will jog.
3. Both remotes now control the shade.
4. Continue doing this with each shade until all shades are programmed in the desired groups.

NOTE: Each RTS motor can be paired with 12 unique transmitters.

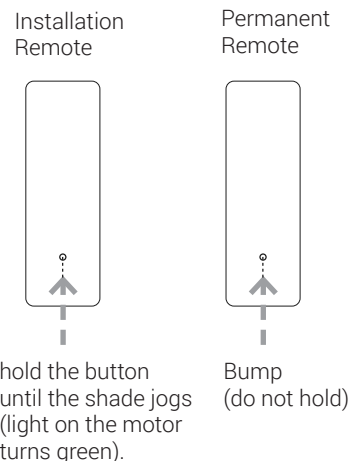

STEP 3 - Pair Groups to control system (LinkPro, MyLink) :

1. Download the MyLink app.
2. Pair the grouped shades with LinkPro or MyLink according to the instructions in the MyLink app.

Problem	Possible Cause	Action to Take
For RTS		
Shade won't operate.	Motor is not powered.	When the battery of a wire free motor is low the user is notified by a series of red led flashes visible on the left end cap. These flashes will only occur after a command has been given. If the motor is low or dead, the charging cord can be plugged in and the shade will operate while charging.
	Remote button presses are too short.	When operating an RTS remote hold the buttons down for at least 2 seconds.
	The remote is being used out of range.	Move within 30ft. of the shade. If the issue persists, adjust the antenna to a new position, and make sure the antenna does not touch metal.
	The remote battery is out of place or drained.	Check that the red LED on the remote flashes when buttons are pressed. On the installation remote, pry off the back by hand and ensure the battery is fully seated in the battery tray. If the remote remains unresponsive, replace the battery with a CR2430 3V lithium cell.
Green LED light is flashing - shade is not operating properly (WireFree only).	The motor is in programming mode.	Briefly click the program button on the back of the installation remote. The green light will turn off and the shade will return to user mode.
		OR
		Move the shade to the lower limit by holding the up or down button. Hold the "My" button until the screen jogs - the green LED will stop flashing.
<div>  Please use this QR Code to access the updated installation instructions and related documents. </div> <div> Technical Support: 512.832.6939 Hours of Support: 7:30am - 5pm CST </div> <div> screeninnovations.com support@screeninnovations.com </div>		

NOTES

-
1. _____
2. _____
3. _____
4. _____
5. _____
6. _____
7. _____
8. _____
9. _____
10. _____
11. _____
12. _____
13. _____
14. _____
15. _____
16. _____
17. _____
18. _____

MOTOR SERIAL NO.S

Please keep a note of all the Serial No.s on your shade motors. OR for larger shade orders, refer to your Sales Order document for the list.

Room

Shade 1

Shade 2

Shade 3

Shade 4

Shade 5

Shade 6

Room

Shade 1

Shade 2

Shade 3

Shade 4



Screen Innovations

9715-B Burnet Rd, Suite 400 Austin, TX 78758

512.832.6939

www.screeninnovations.com