Nano Roll

Installation Instructions

WIREFREE - RTS



INSTALLERS: Please leave this manual with the owner.






Doc. # 400028


Table of Contents

PARTS LIST - NANO ROLL - 275 - WIREFREE	2
PARTS LIST - NANO ROLL - 375 - WIREFREE	3
SPACER BLOCKS AND LEVELING SHIMS	4
INSTALLATION - NANO ROLL - 275 - WIREFREE	- 7
INSTALLATION - NANO ROLL - 375 - WIREFREE8	
PROGRAMMING RTS	.14
TROUBLESHOOTING RTS	. 15

PARTS LIST - NANO ROLL - 275 - WIREFREE

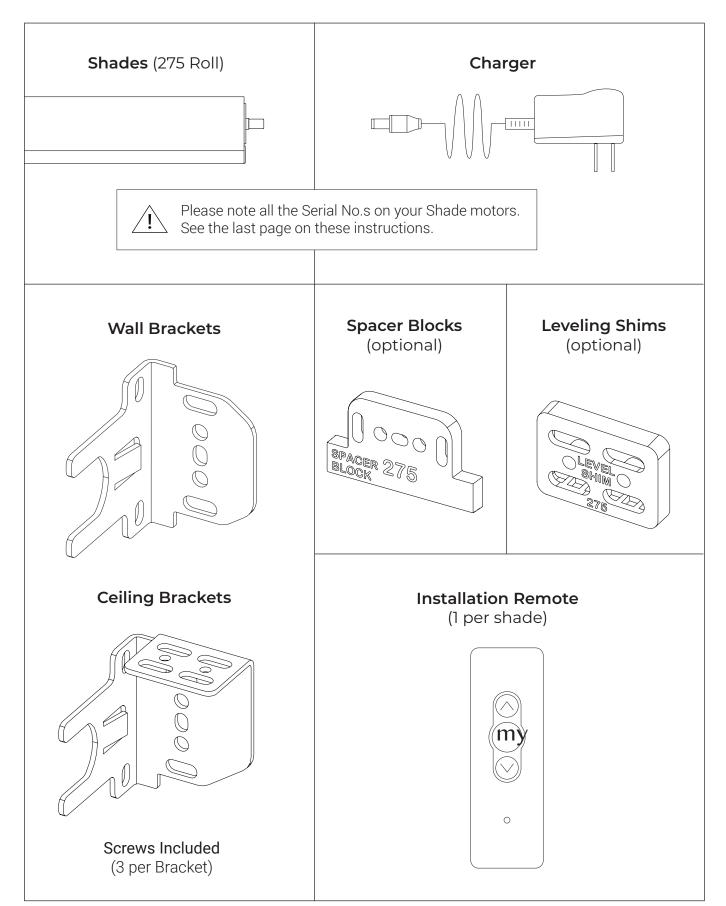


PARTS LIST - NANO ROLL - 375 - WIREFREE

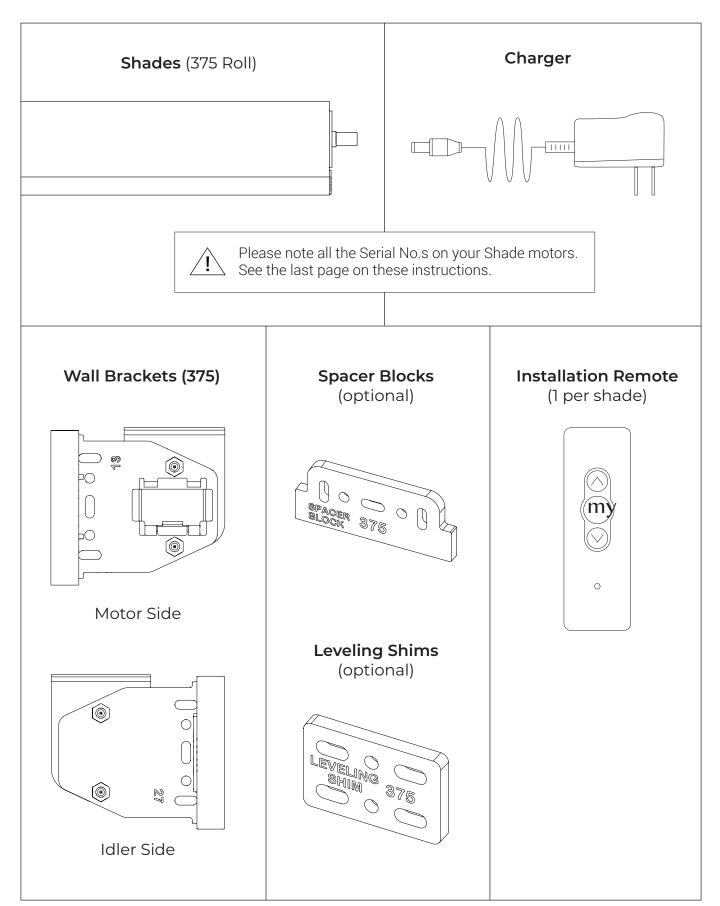


SPACER BLOCKS AND LEVELING SHIMS (OPTIONAL)

Spacer Blocks - used to clear an obstruction in the fabric path.

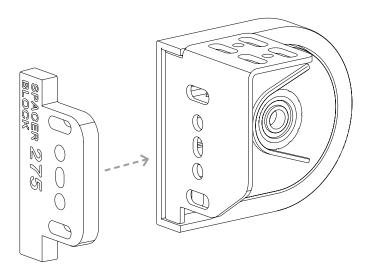



Connect spacer blocks to shade brackets before installation Note: Do not use more than 4 Spacer blocks per bracket.


Leveling Shims - used if the window frame is out of level.

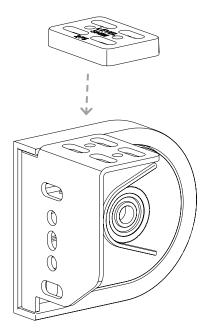


Connect to shade brackets before installation Note: do not use more than 2 leveling shims per bracket.

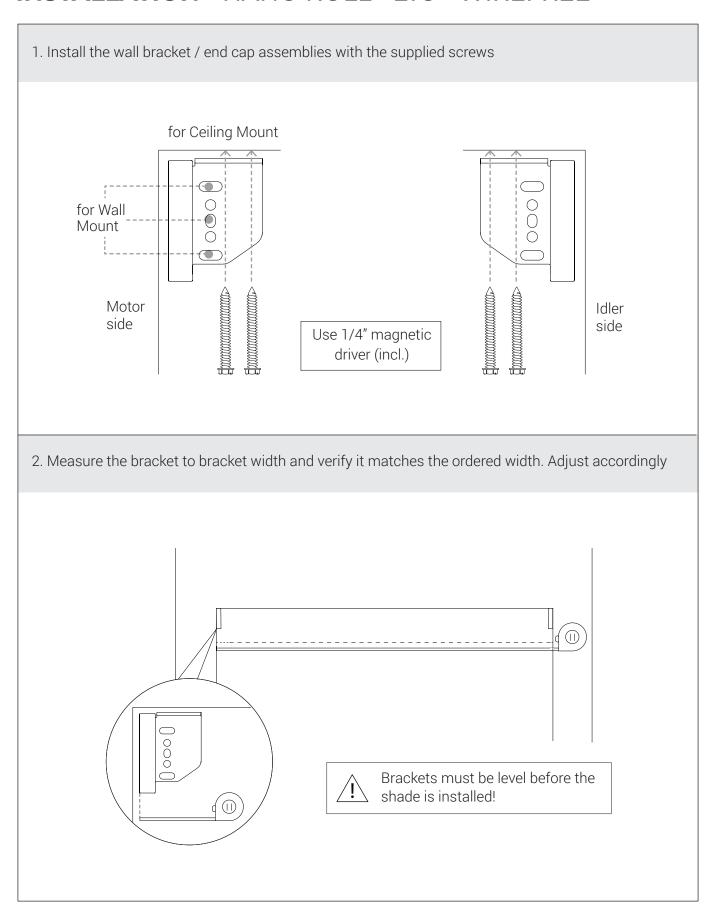


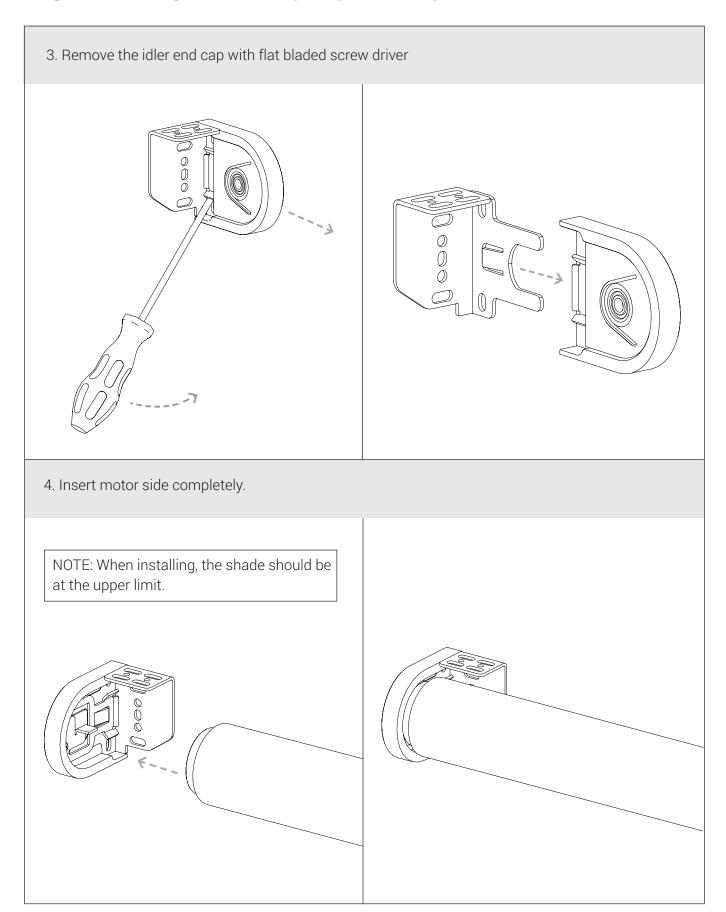


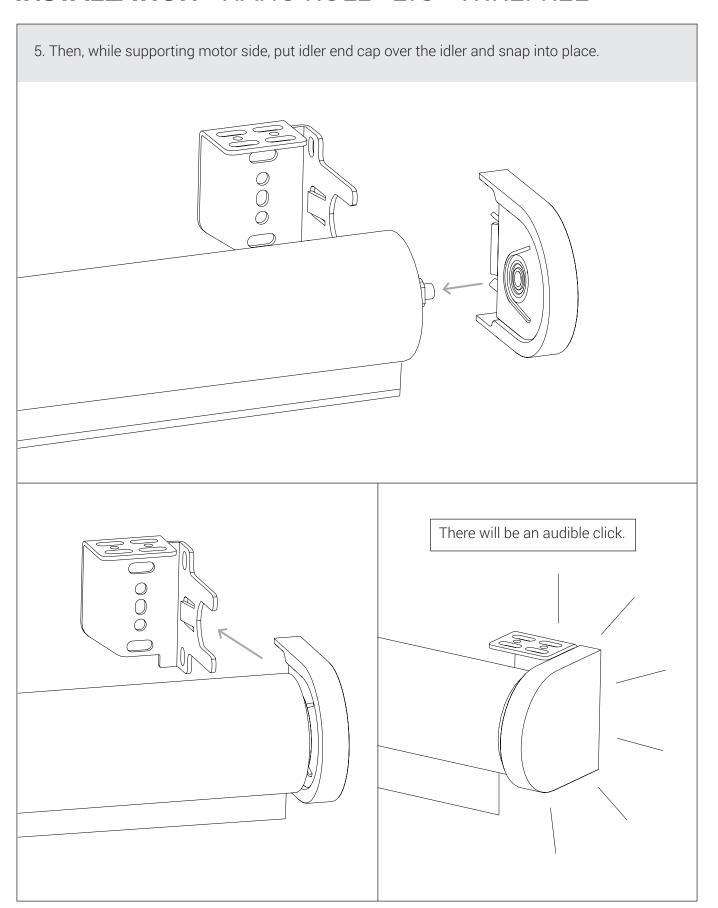


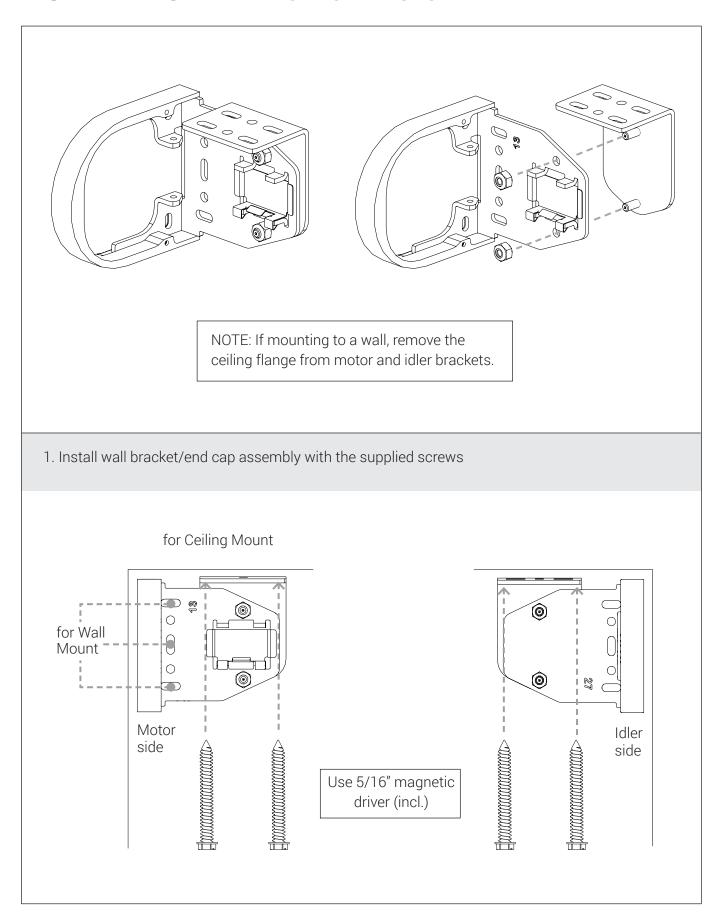


2. Measure bracket to bracket width and verify it matches the ordered width. Adjust accordingly. **≥** 0 Brackets must be level before the 0 shade is installed!

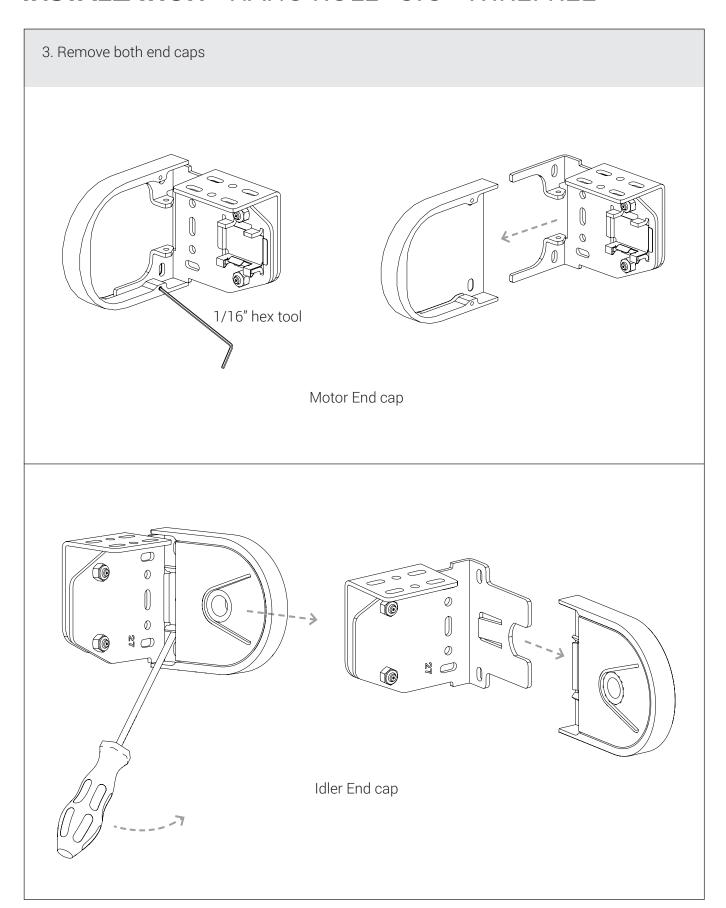

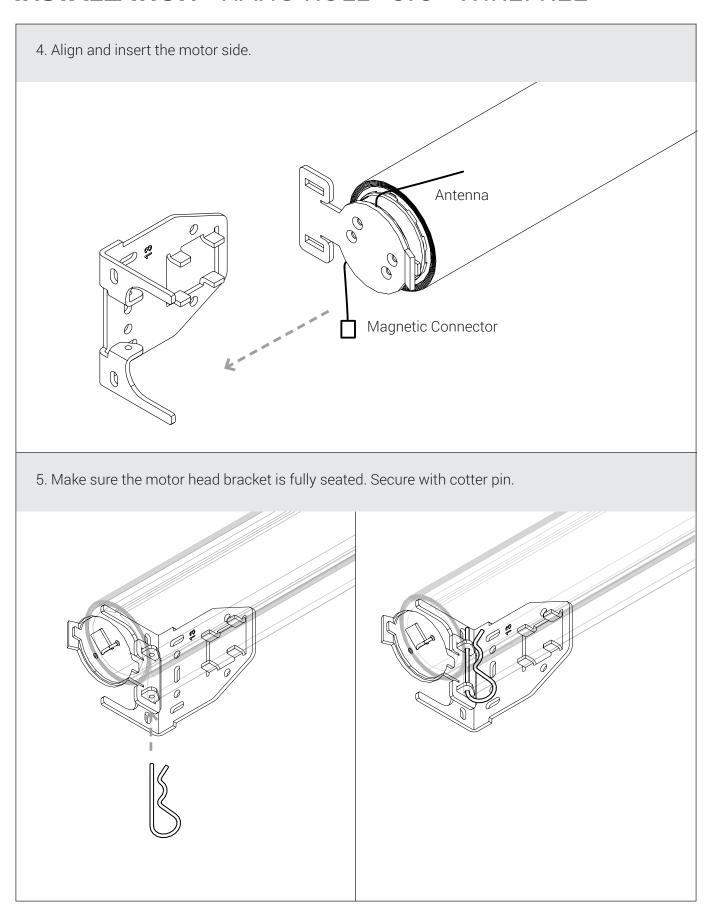

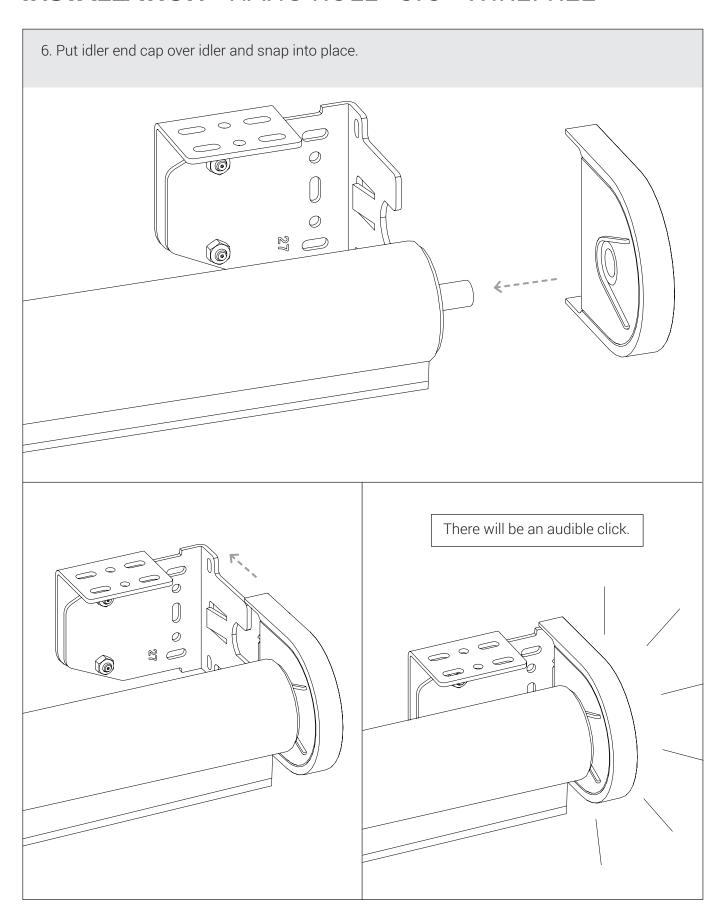

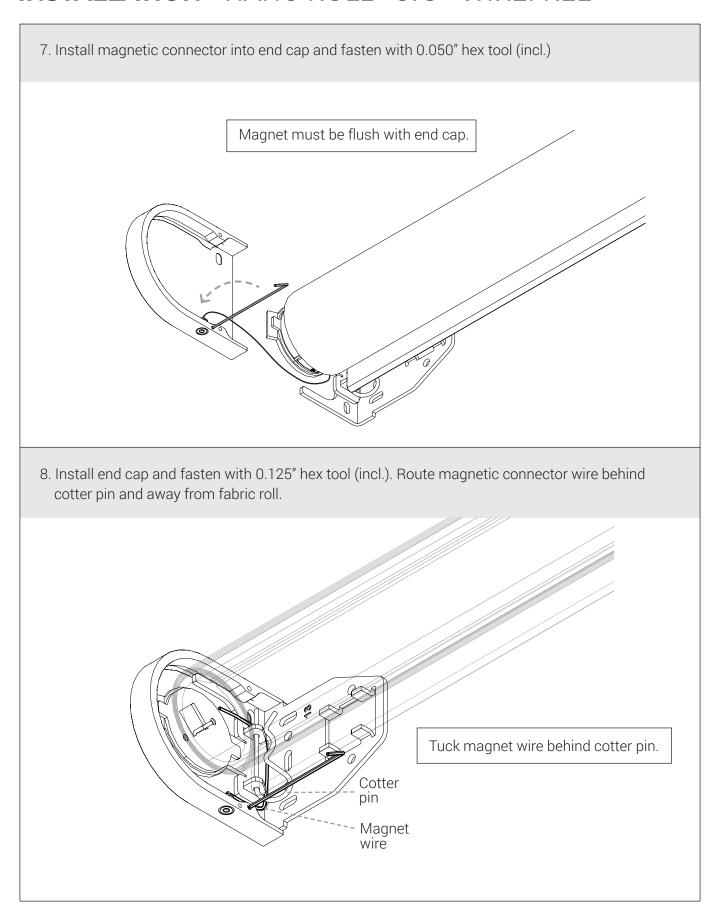

PROGRAMMING - RTS

PROGRAMMING STEPS (must follow in order)

Step 1: Fine tune lower limit

Step 2: Assign shades to groups

Step 3: Pair groups to control system (Mylink, LinkPro)

Narning: Do not attempt to use any installation remote until all the shades are installed.

Each RTS Nano shade includes an installation remote that is used to adjust limits and program group controls. These installation remotes are uniquely numbered to the shade they are paired with. The lower limit of every shade is preprogrammed to ½" from the bottom of the window. After installing each shade, follow these steps to adjust the lower limit:

STEP 1 - Fine tuning lower limit :

- 1. Beginning with the first shade, pull plastic tab from remote and press

 allowing shade to run to lower limit set at the factory.
- 2. When shade has stopped, adjust the lower limit by holding \triangle and ∇ simultaneously until the shade jogs.
- 3. Use \triangle or ∇ to move the shade to the desired lower limit.
- 4. Hold the "My" button until the shade jogs again.
- 5. Repeat this procedure at each window until all shades have lower limits set to desired positions.

STEP 2 - Assign shades to groups:

Next, program group controls. To pair with a permanent transmitter such as a multichannel Telis or DecoFlex, follow these steps.

- 1. Press and hold the program button on the back of the installation remote until the shade jogs.
- 2. Select the channel where you want to create a group, then bump (do not hold down) the program button on the back of the remote the shade will jog.
- 3. Both remotes now control the shade.
- 4. Continue doing this with each shade until all shades are programmed in the desired groups.

NOTE: Each RTS motor can be paired with 12 unique transmitters.

Installation Remote Permanent Remote hold the button until the shade jogs (light on the motor

turns green).

STEP 3 - Pair Groups to control system (LinkPro, MyLink):

- 1. Download the MyLink app.
- 2. Pair the grouped shades with LinkPro or MyLink according to the instructions in the MyLink app.

Programming - RTS 14

TROUBLESHOOTING - RTS

Problem	Possible	e Cause	Action to Take	
For RTS Shade won't operate.	Motor is not powered.		When the battery of a wire free motor is low the user is notified by a series of red led flashes visible on the left end cap. These flashes will only occur after a command has been given. If the motor is low or dead, the charging cord can be plugged in and the shade will operate while charging.	
	Remote button presses are too short.		When operating an RTS remote hold the buttons down for at least 2 seconds.	
	The remote is being used out of range.		Move within 30ft. of the shade. If the issue persists, adjust the antenna to a new position, and make sure the antenna does not touch metal.	
	The remote battery is out of place or drained.		Check that the red LED on the remote flashes when buttons are pressed. On the installation remote, pry off the back by hand and ensure the battery is fully seated in the battery tray. If the remote remains unresponsive, replace the battery with a CR2430 3V lithium cell.	
Green LED light is flashing - shade is not operating properly (WireFree only). The motor is in programming mode.			Briefly click the program button on the back of the installation remote. The green light will turn off and the shade will return to user mode.	
			Move the shade to the lower limit by holding the up or down button. Hold the "My" button untill the screen jogs - the green LED will stop flashing.	
to access the updated		• •	ort: 512.832.6939 screeninnovations.com t: 7:30am - 5pm CST support@screeninnovations.com	

Tech Support: 512.832.6939

Troubleshooting - RTS 15

MOTOR SERIAL NO.S

Please keep a note of all the Serial No.s on your shade motors. OR for larger shade orders, refer to your Sales Order document for the list. Room Shade 1 Shade 2 Shade 3 Shade 4 Shade 5 Shade 6 Room Shade 1 Shade 2 Shade 3 Shade 4

Motor Serial No.s



Screen Innovations

9715-B Burnet Rd, Suite 400 Austin, TX 78758 512.832.6939 www.screeninnovations.com