

Nano Roll

Installation Instructions




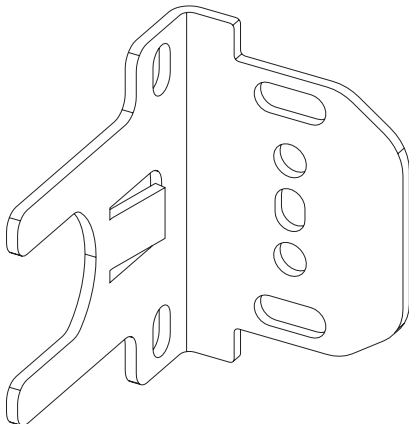
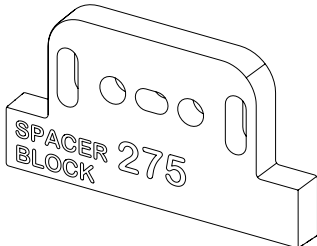
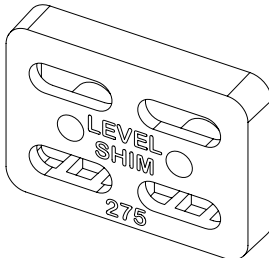
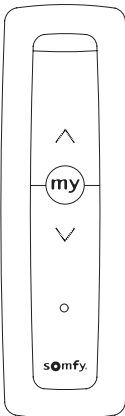
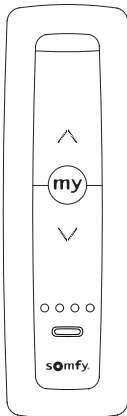
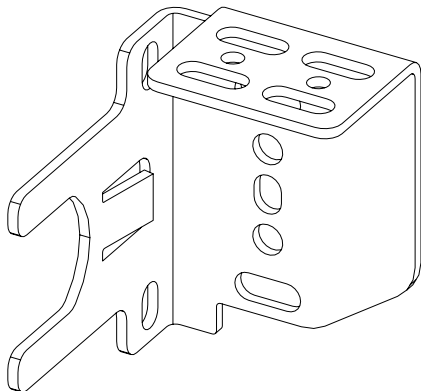
External Battery Wirefree - Zigbee



INSTALLERS: Please leave this manual with the owner.




PARTS LIST - NANO ROLL (NARROW) - WIREFREE
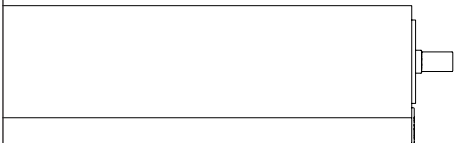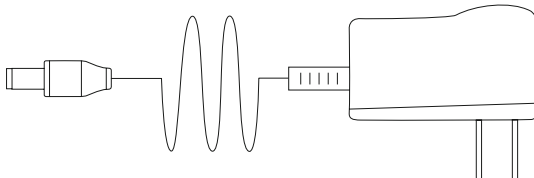
<div>Shades (275 Roll)</div> <div></div>		<div>Charger</div> <div></div>	
<div><div></div><div>Please note all the QR CODES on your Shade motors. See the last page on these instructions.</div></div>			
<div>Wall Brackets</div> <div></div>	<div>Spacer Blocks (included)</div> <div></div>		<div>Leveling Shims (included)</div> <div></div>
	<div>Situo Remotes (Optional)</div> <div><div></div><div></div></div> <div>1 channel4 channels</div>		
<div>Ceiling Brackets</div> <div></div>	<div>Screws Included (3 per bracket)</div>		


NARROW SHADE - INITIAL CONSIDERATIONS

1a. Install 4 Spacer Blocks per bracket, to accommodate for external battery.

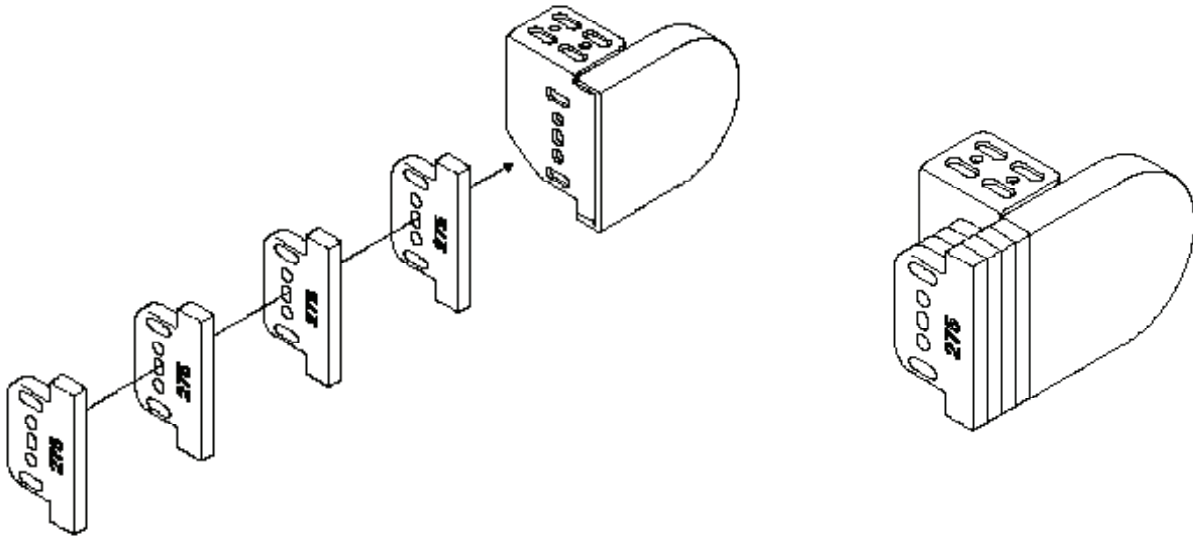

Wall Mount only

1b. Install shade brackets at least 1" from back plane (glass or wall) to accommodate for external battery.

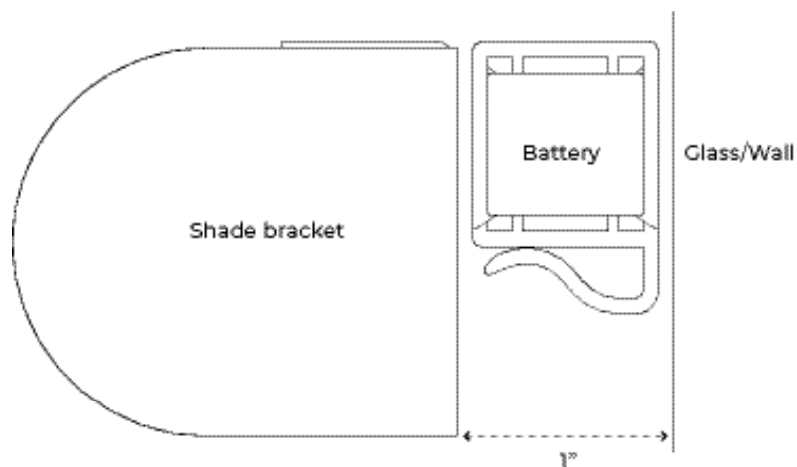


Ceiling Mount only

SPACER BLOCKS AND LEVELING SHIMS (OPTIONAL)


Spacer Blocks - used to clear an obstruction in the fabric path.
Connect spacer blocks to shade brackets before installation

NOTE: Do not use more than 4 Spacer blocks per bracket.

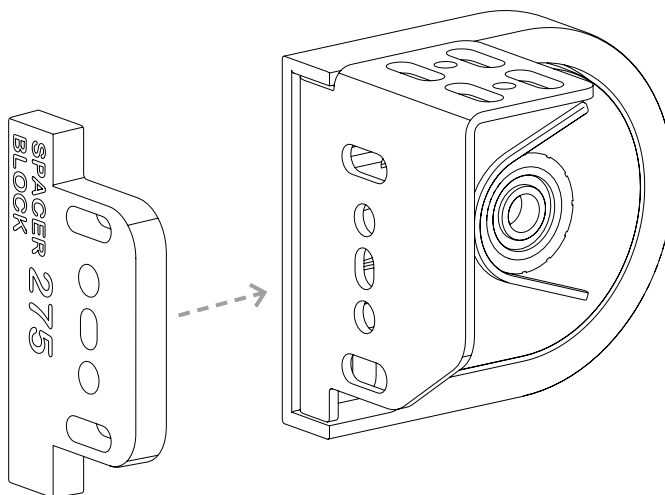


Leveling Shims - used if the window frame is out of level.
Connect to shade brackets before installation

NOTE: Do not use more than 2 leveling shims per bracket.

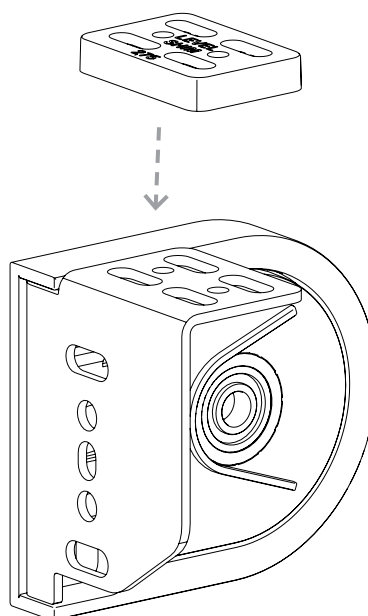


BRACKET INSTALLATION

1a. Install the wall bracket / end cap assemblies with the supplied screws

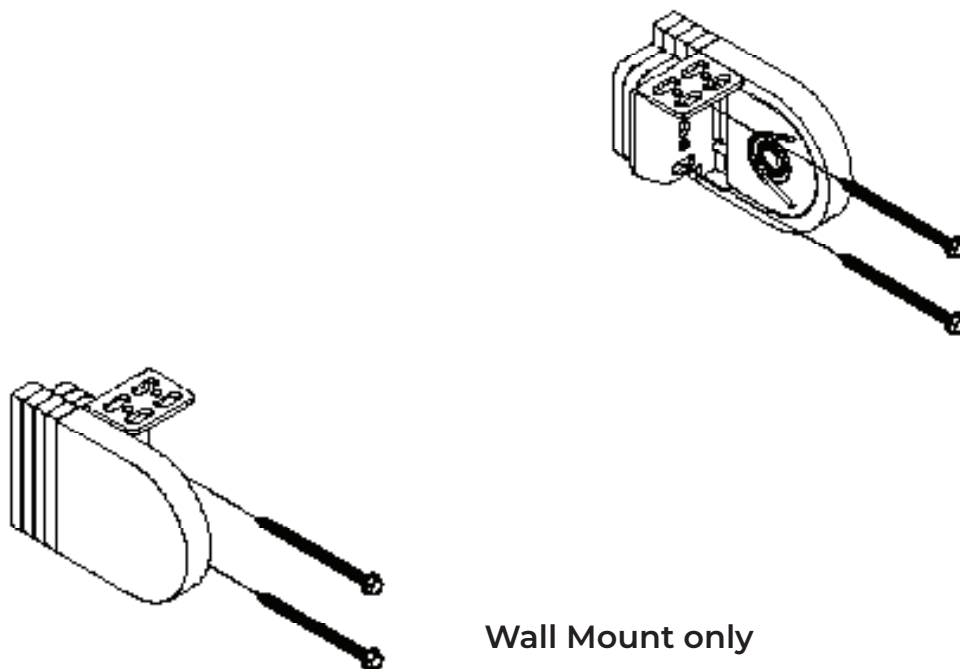


1b. Install the wall bracket / end cap assemblies with the supplied screws

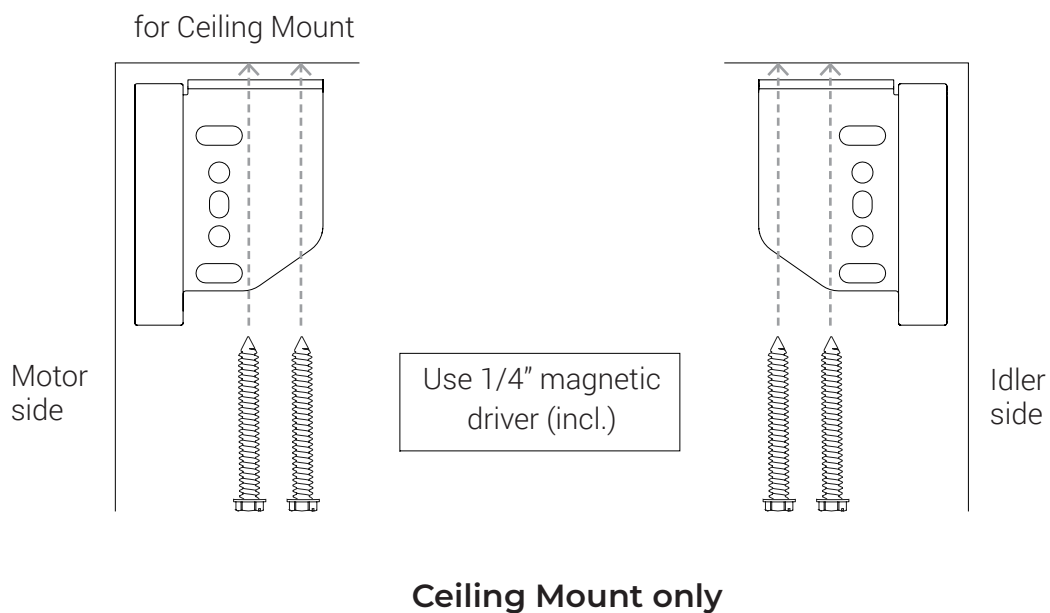

MEASURE - NANO ROLL


Measure the end cap to end cap width and verify it matches the ordered width. Adjust accordingly

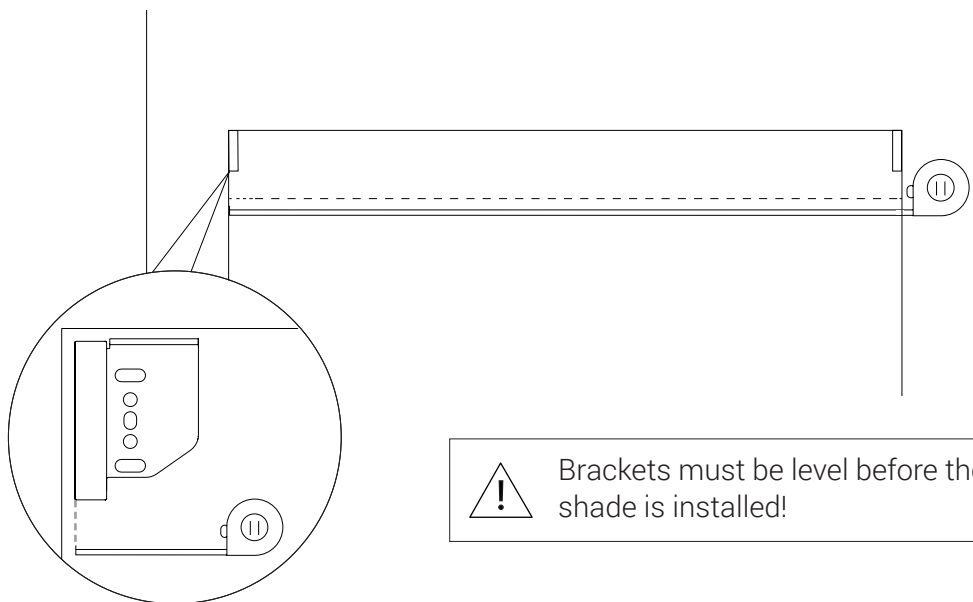


Brackets must be level before the shade is installed!

BATTERY INSTALLATION - WALL MOUNT


1. Install the external battery brackets to the dimensions listed below

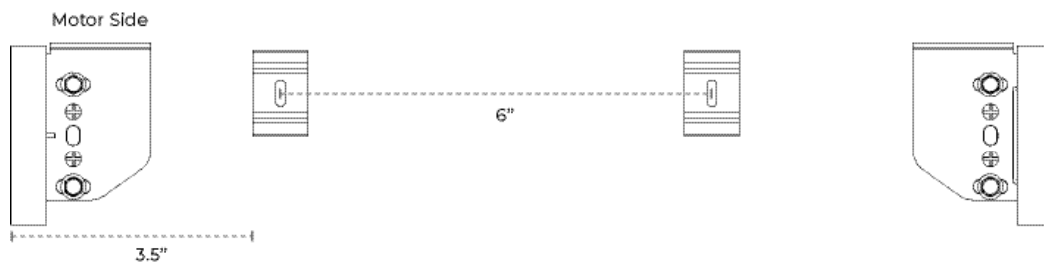

2. Fasten each bracket with the included hardware (use drywall anchors if necessary)

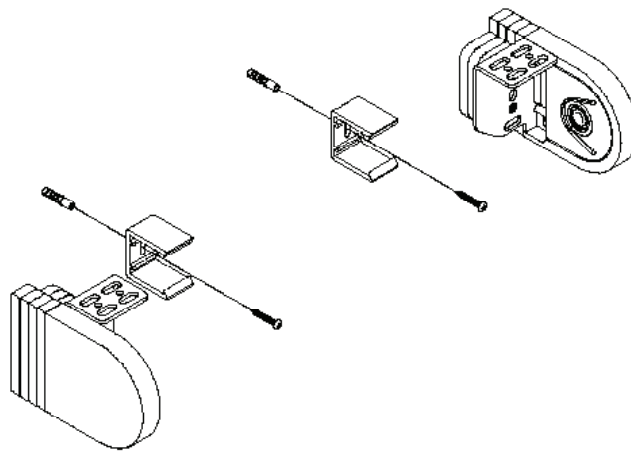


3. Connect the magnet wire to the external battery and install into the brackets as shown below.

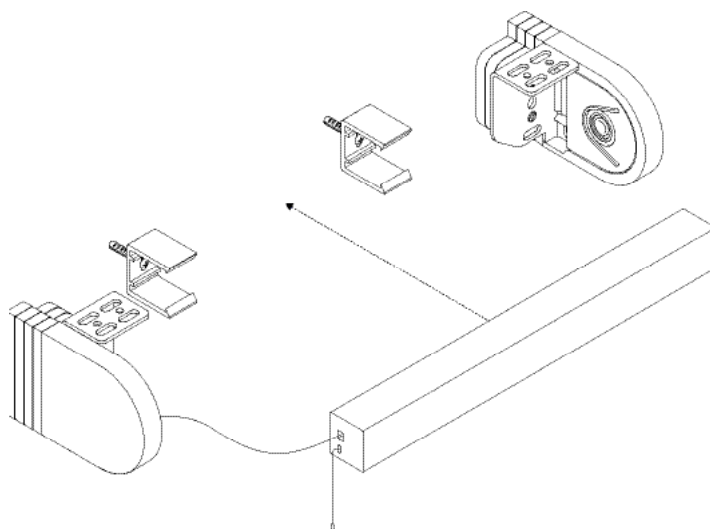


BATTERY INSTALLATION - CEILING MOUNT

1. Install the external battery brackets to the dimensions listed below

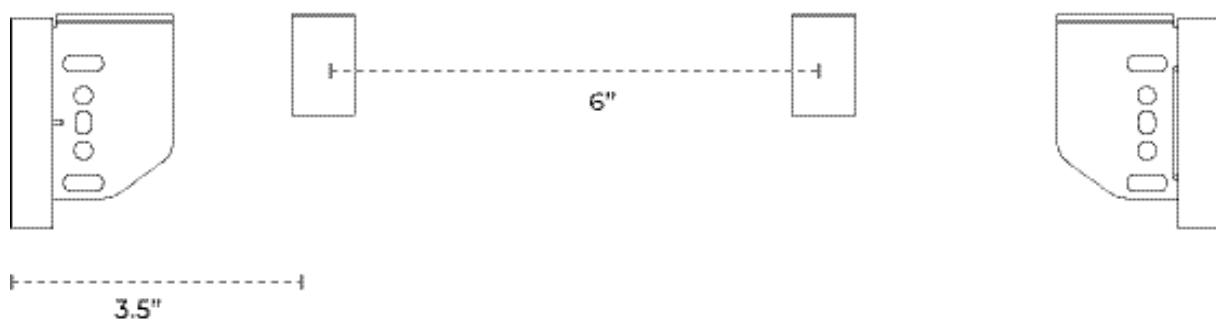


2. Fasten each bracket with the included hardware (use drywall anchors if necessary)

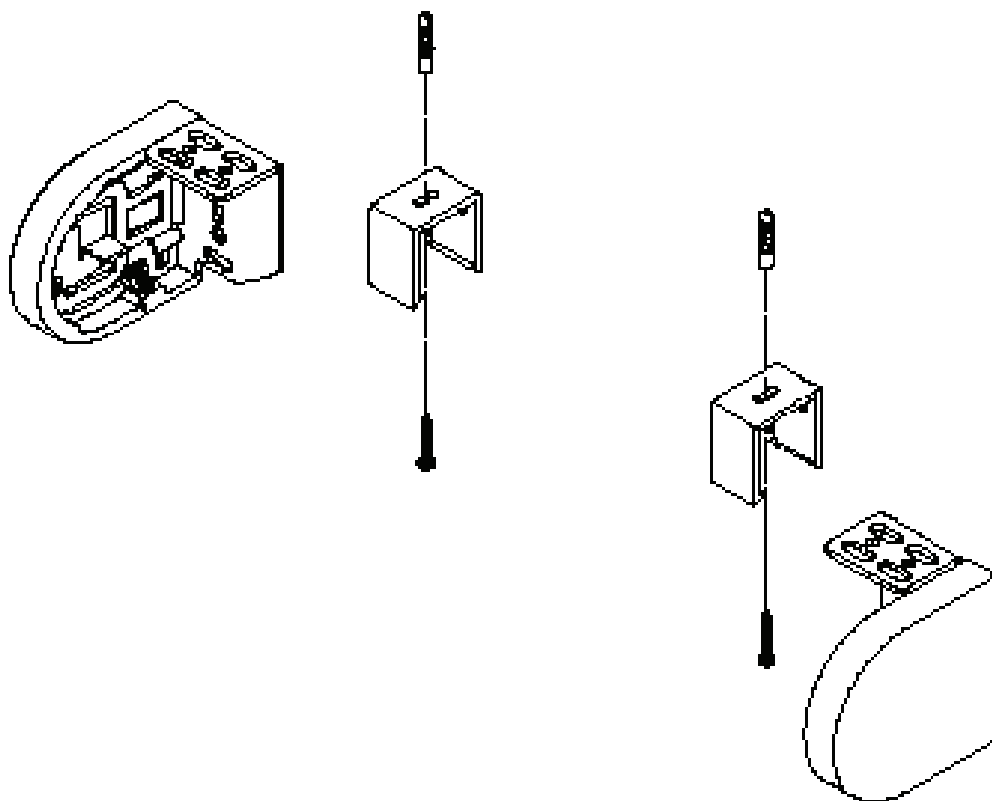


BATTERY INSTALLATION - CEILING MOUNT

3. Connect the magnet wire to the external battery and install into the brackets as shown below.


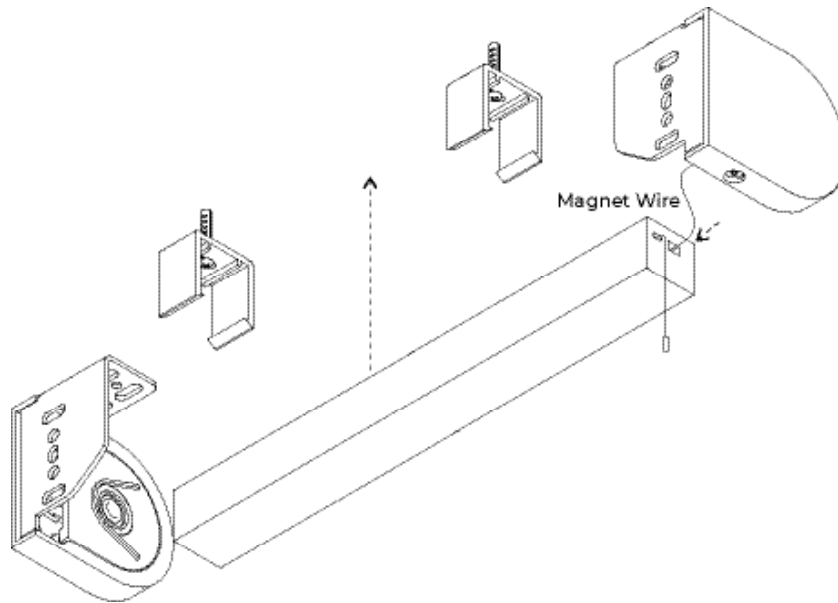


4. Install wire clips as shown (optional)

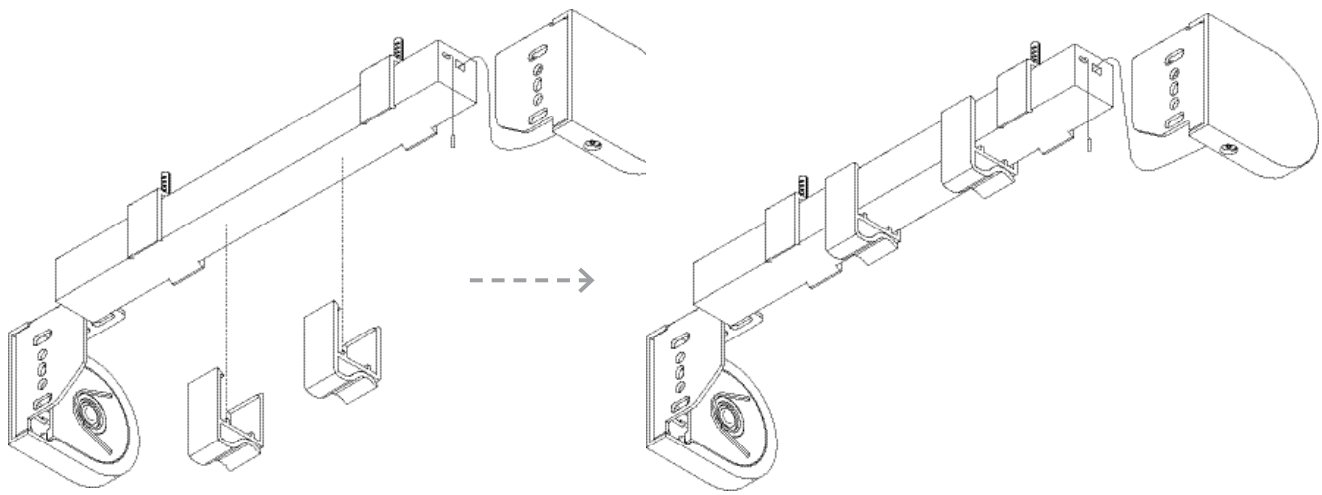



SHADE INSTALLATION - NANO ROLL

1. Remove the idler end cap with flat bladed screw driver

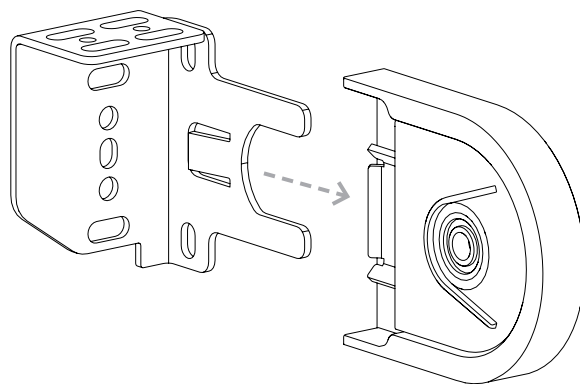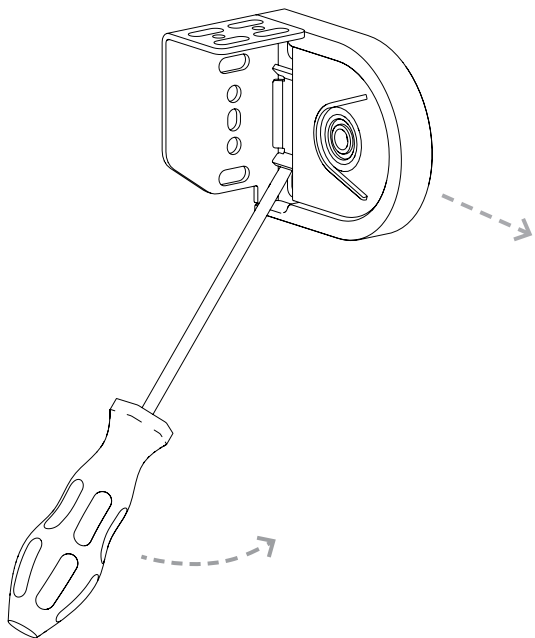



2. Insert motor side completely.

NOTE: When installing, the shade should be at the upper limit.

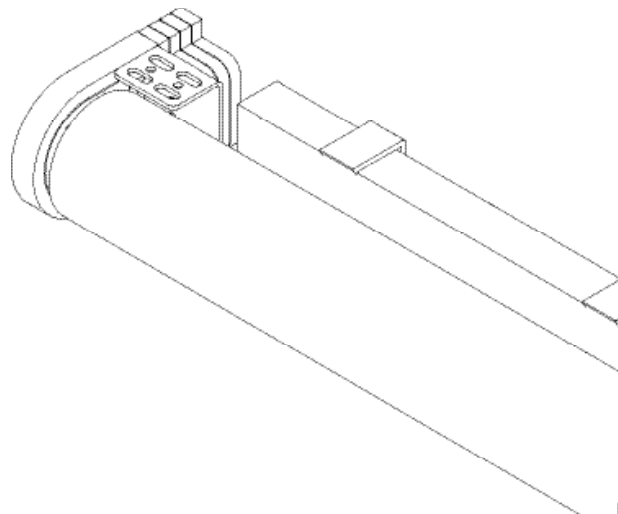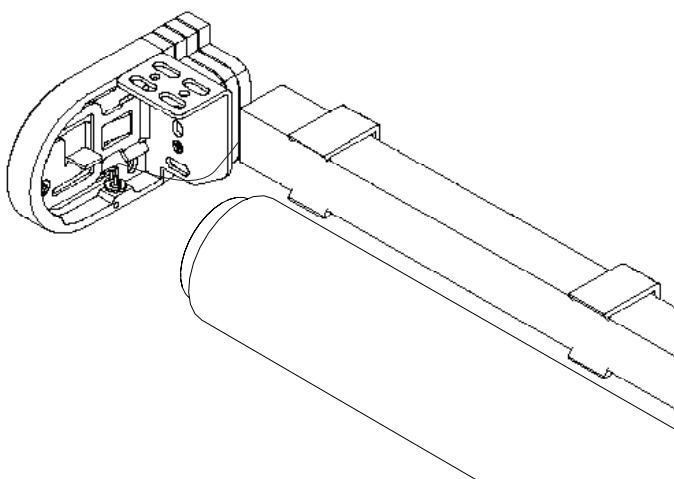


SHADE INSTALLATION - NANO ROLL

3. Then, while supporting motor side, put idler end cap over the idler and snap into place.

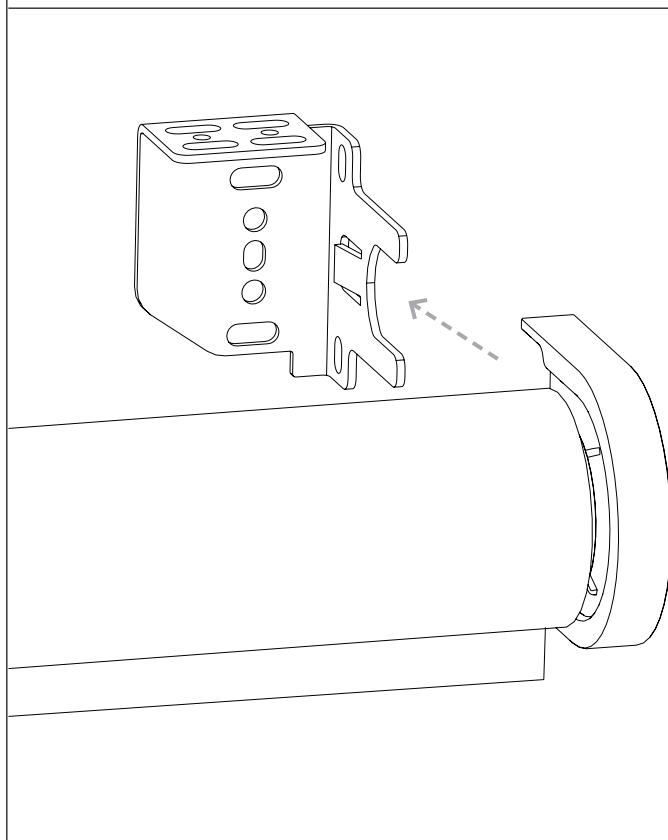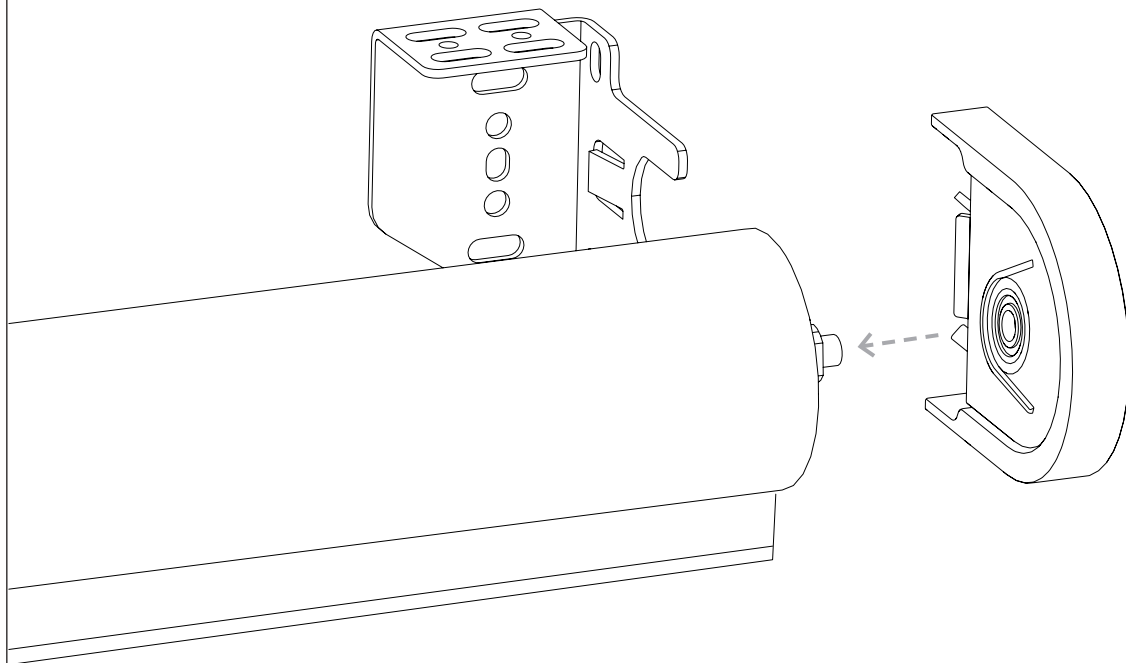


There will be an audible click.

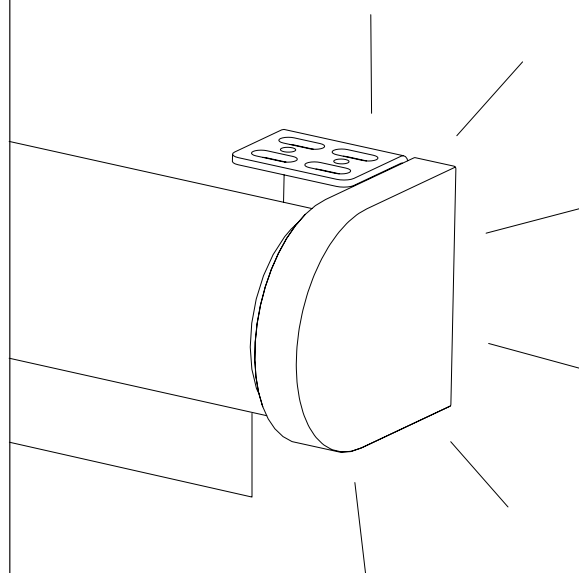

CONNECT BATTERY - WALL MOUNT


1. Connect Shade to External Battery as shown below.

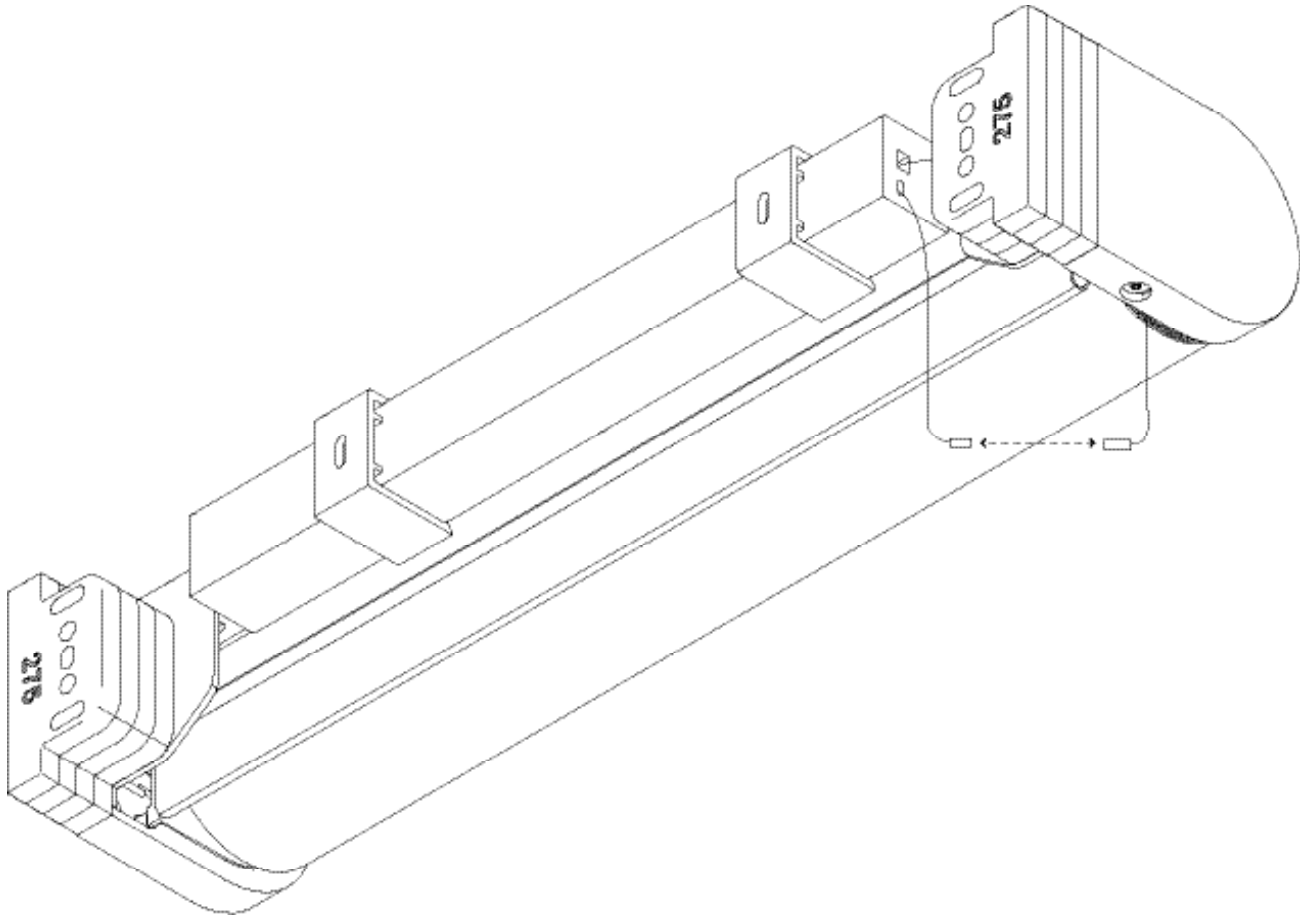

NOTE: After connecting shade to battery, tuck wires up and away from shade.

CONNECT BATTERY - WALL MOUNT

1. Connect Shade to External Battery as shown below.

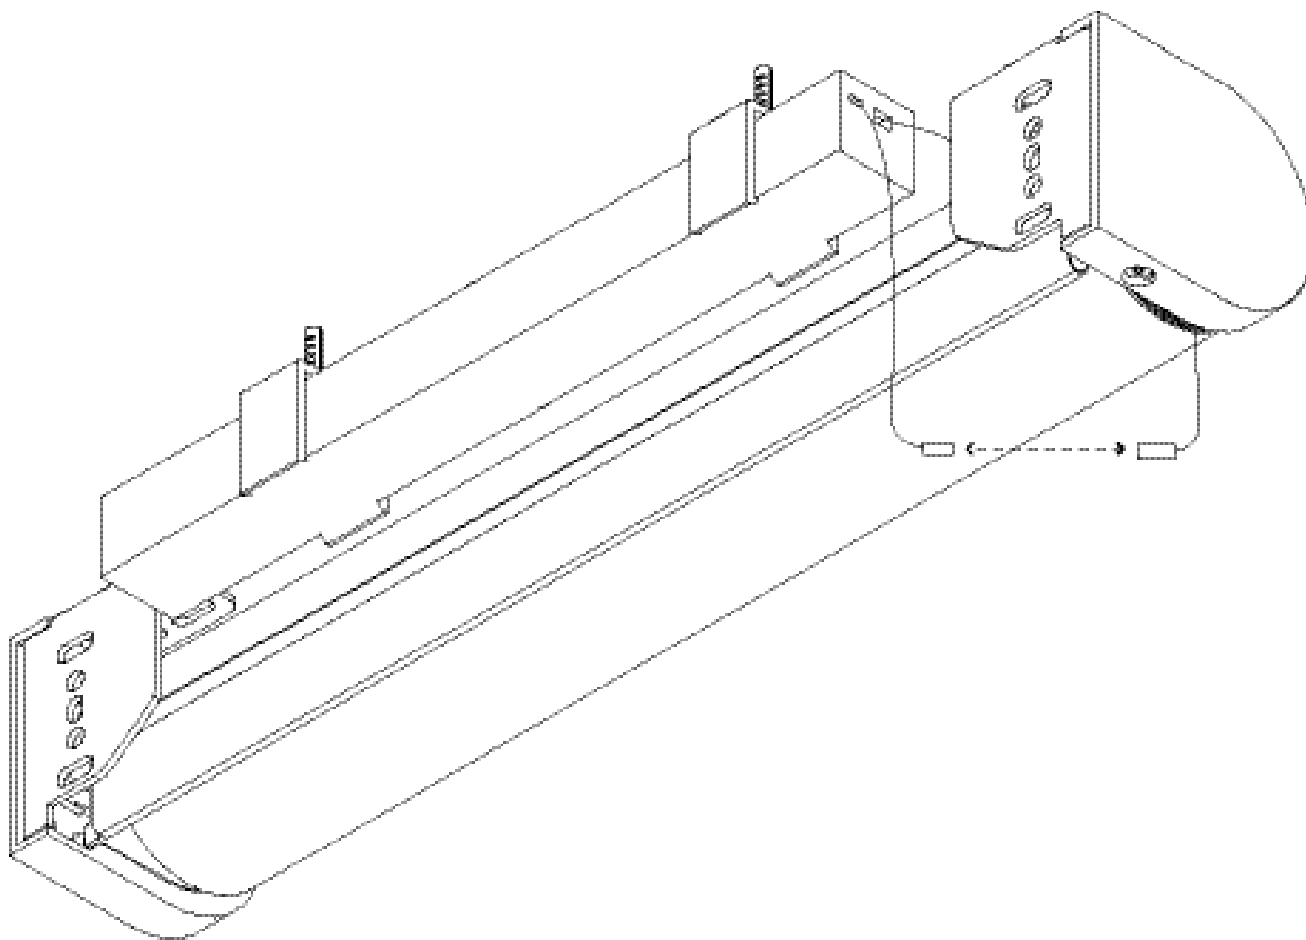

NOTE: After connecting shade to battery, tuck wires up and away from shade.

PROGRAMMING - ZIGBEE

PROGRAMMING STEPS

(TaHoma/LinkPro Z must be plugged in and on the network)

Step 1: Fine tune lower limit.

Step 2: Assign shades to groups and remotes.

Step 3: Pair devices and groups with remotes.

The lower limit of every shade is preprogrammed to 1/2" from the bottom of the window. After installing each shade, follow these steps to adjust the lower limit:

STEP 1 - Fine tuning lower limit :

1. Click on the 3 dots in the lower right hand corner of the TaHoma app.
Note: You may see a pop-up warning window which could damage the shade.
2. In settings click on advanced settings.
3. Select the shade you want to set the limits to.
4. You only want to select and adjust the lower limit.
Note: Do not set upper limit or change rotation.
5. Press the down button in the app to move the shade to the Factory set lower limit.
6. Click Next.
7. Now make up or down adjustments to shade using the Up / Down increments. Each (button press) adjustment can take a couple seconds, to execute. Once you are satisfied with the new lower limit, press save Limit.

STEP 2 - Assign shades to groups :

All grouping of devices is completed within the TaHoma application:

1. Open the TaHoma application and navigate to the configuration tab.
2. Press the + symbol in the upper right corner.
3. Choose the Zigbee device type.
4. Select "Add Zigbee Group".
5. Label the group.
6. Select the devices you would like to be included in this group.


STEP 3 - Pair devices or groups with a remote:

All pairing of devices and groups to remotes is completed within the TaHoma application. In order to pair more than one shade to a channel, a group must be created first.

1. Open the TaHoma application and navigate to the configuration tab.
2. Press the chain/link button next to the remote being configured.
3. Select the shade or group to pair from the list and deselect any other devices.
4. Quick press the programming button on the back of the remote and click OK in the application to confirm.

NOTE: Each Zigbee Situo remote channel will be capable of pairing to a group containing up to 20 motors.

TROUBLESHOOTING - ZIGBEE

Problem	Possible Cause	Action to Take
For Zigbee		
TaHoma LED is Red.	No internet connectivity.	Check network connection to the internet, and ensure the TaHoma is properly connected via ethernet or Wifi.
Shade won't operate.	Motor battery is low/drained.	Check the battery level of a motor via the TaHoma application. If the battery level is below 20%, the charging cord can be plugged in and the shade will operate while charging.
	The remote battery may be low.	Check that the green LED on the remote flashes when a button is pressed. If the LED does not flash at all, the remote may need a new CR2430 battery.
 <p>Please use this QR Code to access the updated installation instructions</p>		<p>Technical Support: 512.832.6939 screeninnovations.com</p> <p>Hours of Support: 7:30am - 5pm CST support@screeninnovations.com</p>

NOTES

-
1. _____
2. _____
3. _____
4. _____
5. _____
6. _____
7. _____
8. _____
9. _____
10. _____
11. _____
12. _____
13. _____
14. _____
15. _____
16. _____
17. _____
18. _____

MOTOR SERIAL NO.S

Please keep a note of all the Serial No.s on your shade motors. OR for larger shade orders, refer to your Sales Order document for the list.

Room

Shade 1

Shade 2

Shade 3

Shade 4

Shade 5

Shade 6

Room

Shade 1

Shade 2

Shade 3

Shade 4



Screen Innovations

9715-B Burnet Rd, Suite 400 Austin, TX 78758

512.832.6939

www.screeninnovations.com